


Loading Paper

1

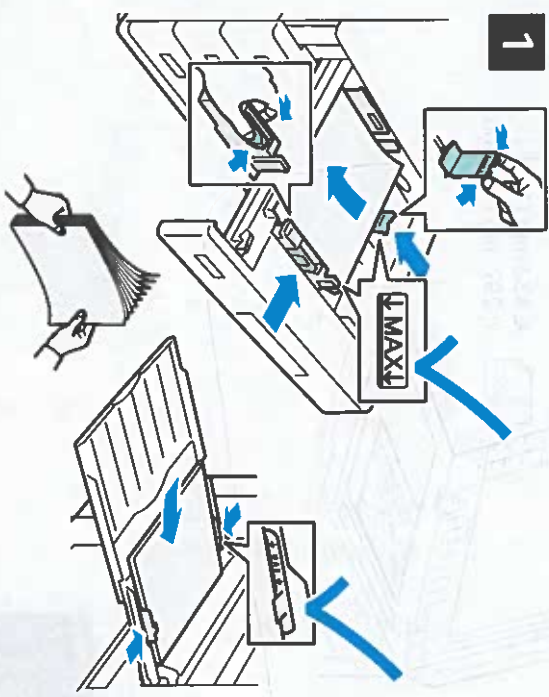


2



Confirm or change size, type, and color settings if needed.

3

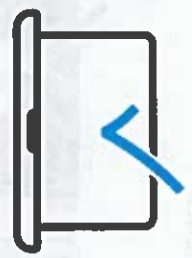


For the best results, fan the edges of the paper. Adjust the guides to fit the paper size. Do not load paper above the maximum fill line.

When printing, select options in the print driver.


Paper Orientation




Letterhead

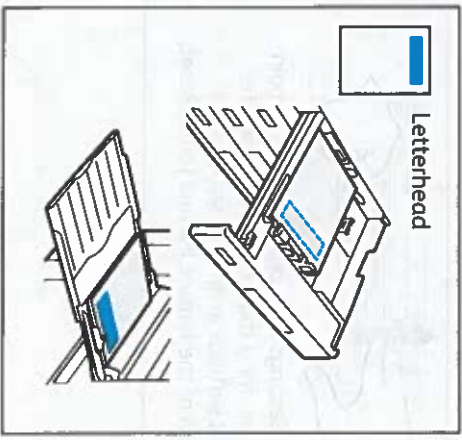

Hole Punched

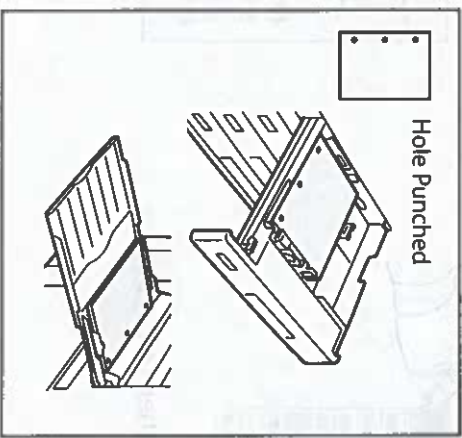

Envelope

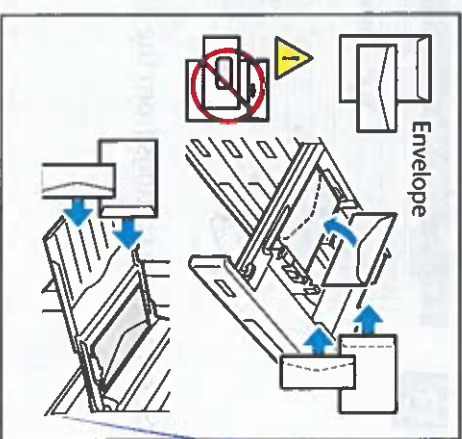

www.xerox.com/office/support