

39582

Faxing



You can send a fax in one of four ways:

- Fax scans the document then sends it directly to a fax machine.
- Server Fax scans the document then sends it to a fax server, which transmits the document to a fax machine.
- Internet Fax scans the document then emails it to a recipient.
- LAN Fax sends the current print job as a fax.

For details, refer to the *User Guide*. For details about LAN Fax, refer to the print driver software. For details about fax setup and advanced settings, refer to the *System Administrator Guide*.

1

- X: 85-432 mm (3.3-17 in.)
- Y: 125-297 mm (4.9-11.7 in.)
- 38-128 g/m²
- (26 lb. Text-34 lb. Bond)
- ≤130 (80 g/m², 20 lb. Bond)
- C8270: ≤250

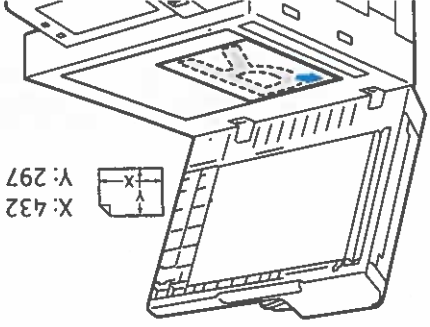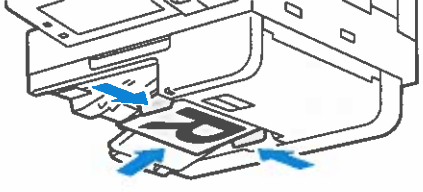

X: 432 mm (17 in.)
Y: 297 mm (11.7 in.)

Load the original document.

2



To send the fax to a fax machine, press Home, then touch Fax or Server Fax.

To send the fax as an email attachment, touch Home, then touch Internet Fax.