


82512

Xerox® AltaLink® C8230/C8235/C8245/C8255/C8270  
Color Multifunction Printer



# Control Panel

Available apps can vary based on your printer setup. For details about apps and features, refer to the *User Guide*.

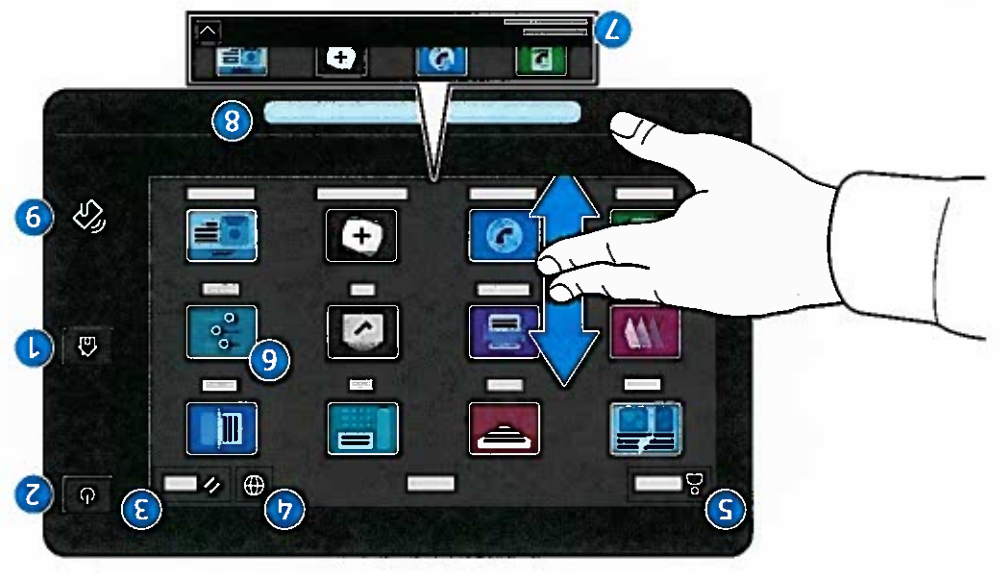

1 Home returns to the main app screen.

2 Power/Wake starts the printer or provides options to sleep, restart or power off the printer.

3 Reset restores settings to their default values in all apps.

4 Language provides choice of screen languages.

5 Log In provides special access to tools and settings.

6 Device app provides access to printer information and settings.

7 Notification banner shows printer status and warnings. To see all notifications, touch the banner. To close the banner, touch the down arrow.

8 Status LED indicates printer status. For detailed information, refer to the *User Guide*.

9 NFC Area allows pairing with a mobile device to print or scan from an app.