

Resident Fonts

Position	Font Name	Print Sample
1	Courier «Esc»(Symbol set«Esc»(s0p«pitch»h0s0b4099T	'ABCDEFGFGabcdefg0123456789&?!.,'
2	CG Times «Esc»(Symbol set«Esc»(s1p«size»v0s0b4101T	'ABCDEFGFGabcdefg0123456789&?!.,'
3	CG Times Bold «Esc»(Symbol set«Esc»(s1p«size»v0s3b4101T	'ABCDEFGFGabcdefg0123456789&?!.,'
4	CG Times Italic «Esc»(Symbol set«Esc»(s1p«size»v1s0b4101T	'ABCDEFGFGabcdefg0123456789&?!.,'
5	CG Times Bold Italic «Esc»(Symbol set«Esc»(s1p«size»v1s3b4101T	'ABCDEFGFGabcdefg0123456789&?!.,'
6	CG Omega «Esc»(Symbol set«Esc»(s1p«size»v0s0b4113T	'ABCDEFGFGabcdefg0123456789&?!.,'
7	CG Omega Bold «Esc»(Symbol set«Esc»(s1p«size»v0s3b4113T	'ABCDEFGFGabcdefg0123456789&?!.,'
8	CG Omega Italic «Esc»(Symbol set«Esc»(s1p«size»v1s0b4113T	'ABCDEFGFGabcdefg0123456789&?!.,'
9	CG Omega Bold Italic «Esc»(Symbol set«Esc»(s1p«size»v1s3b4113T	'ABCDEFGFGabcdefg0123456789&?!.,'
10	Coronet «Esc»(Symbol set«Esc»(s1p«size»v1s0b4116T	'ABCDEFGFGabcdefg0123456789&?!.,'
11	Clarendon Condensed «Esc»(Symbol set«Esc»(s1p«size»v4s3b4140T	'ABCDEFGFGabcdefg0123456789&?!.,'
12	Univers Medium «Esc»(Symbol set«Esc»(s1p«size»v0s0b4148T	'ABCDEFGFGabcdefg0123456789&?!.,'
13	Univers Bold «Esc»(Symbol set«Esc»(s1p«size»v0s3b4148T	'ABCDEFGFGabcdefg0123456789&?!.,'
14	Univers Medium Italic «Esc»(Symbol set«Esc»(s1p«size»v1s0b4148T	'ABCDEFGFGabcdefg0123456789&?!.,'
15	Univers' Bold Italic «Esc»(Symbol set«Esc»(s1p«size»v1s3b4148T	'ABCDEFGFGabcdefg0123456789&?!.,'
16	Univers Medium Condensed «Esc»(Symbol set«Esc»(s1p«size»v4s0b4148T	'ABCDEFGFGabcdefg0123456789&?!.,'
17	Univers Bold Condensed «Esc»(Symbol set«Esc»(s1p«size»v4s3b4148T	'ABCDEFGFGabcdefg0123456789&?!.,'

Resident Fonts

Position	Font Name	Print Sample
18	Univers Medium Condensed Italic «Esc»(Symbol set«Esc»(s1p«size»v5s0b4148T	'ABCDEFGabcdefg0123456789&?!.,'
19	Univers Bold Condensed Italic «Esc»(Symbol set«Esc»(s1p«size»v5s3b4148T	'ABCDEFGabcdefg0123456789&?!.,'
20	Antique Olive «Esc»(Symbol set«Esc»(s1p«size»v0s0b4168T	'ABCDEFGabcdefg0123456789&?!.,'
21	Antique Olive Bold «Esc»(Symbol set«Esc»(s1p«size»v0s3b4168T	'ABCDEFGabcdefg0123456789&?!.,'
22	Antique Olive Italic «Esc»(Symbol set«Esc»(s1p«size»v1s0b4168T	'ABCDEFGabcdefg0123456789&?!.,'
23	Garamond Antiqua «Esc»(Symbol set«Esc»(s1p«size»v0s0b4197T	'ABCDEFGabcdefg0123456789&?!.,'
24	Garamond Halbfett «Esc»(Symbol set«Esc»(s1p«size»v0s3b4197T	'ABCDEFGabcdefg0123456789&?!.,'
25	Garamond Kursiv «Esc»(Symbol set«Esc»(s1p«size»v1s0b4197T	'ABCDEFGabcdefg0123456789&?!.,'
26	Garamond Kursiv Halbfett «Esc»(Symbol set«Esc»(s1p«size»v1s3b4197T	'ABCDEFGabcdefg0123456789&?!.,'
27	Marigold «Esc»(Symbol set«Esc»(s1p«size»v0s0b4297T	'ABCDEFGabcdefg0123456789&?!.,'
28	Albertus Medium «Esc»(Symbol set«Esc»(s1p«size»v0s1b4362T	'ABCDEFGabcdefg0123456789&?!.,'
29	Albertus Extra Bold «Esc»(Symbol set«Esc»(s1p«size»v0s4b4362T	'ABCDEFGabcdefg0123456789&?!.,'
30	Ryadh «Esc»(Symbol set«Esc»(s1p«size»v0s0b4859T	ABCDEFGabcdefg0123456789&?!.,
31	Ryadh Bold «Esc»(Symbol set«Esc»(s1p«size»v0s3b4859T	ABCDEFGabcdefg0123456789&?!.,
32	Malka «Esc»(Symbol set«Esc»(s1p«size»v0s0b16584T	ABCDEFGabcdefg0123456789&?!.,
33	Malka Bold «Esc»(Symbol set«Esc»(s1p«size»v0s3b16584T	ABCDEFGabcdefg0123456789&?!.,
34	Malka Italic «Esc»(Symbol set«Esc»(s1p«size»v1s0b16584T	ABCDEFGabcdefg0123456789&?!.,

Resident Fonts

Position	Font Name	Print Sample
35	Dorit «Esc»(Symbol set«Esc»(s1p«size»v0s0b16585T	ABCDEFGGabcdefg0123456789&?!.,'
36	Dorit Bold «Esc»(Symbol set«Esc»(s1p«size»v0s3b16585T	ABCDEFGGabcdefg0123456789&?!.,'
37	Naamit «Esc»(Symbol set«Esc»(s1p«size»v0s0b16587T	ABCDEFGGabcdefg0123456789&?!.,'
38	Naamit Bold «Esc»(Symbol set«Esc»(s1p«size»v0s3b16587T	ABCDEFGGabcdefg0123456789&?!.,'
39	Arial «Esc»(Symbol set«Esc»(s1p«size»v0s0b16602T	'ABCDEFGGabcdefg0123456789&?!.,'
40	Arial Bold «Esc»(Symbol set«Esc»(s1p«size»v0s3b16602T	'ABCDEFGGabcdefg0123456789&?!.,'
41	Arial Italic «Esc»(Symbol set«Esc»(s1p«size»v1s0b16602T	'ABCDEFGGabcdefg0123456789&?!.,'
42	Arial Bold Italic «Esc»(Symbol set«Esc»(s1p«size»v1s3b16602T	'ABCDEFGGabcdefg0123456789&?!.,'
43	Times New Roman «Esc»(Symbol set«Esc»(s1p«size»v0s0b16901T	'ABCDEFGGabcdefg0123456789&?!.,'
44	Times New Roman Bold «Esc»(Symbol set«Esc»(s1p«size»v0s3b16901T	'ABCDEFGGabcdefg0123456789&?!.,'
45	Times New Roman Italic «Esc»(Symbol set«Esc»(s1p«size»v1s0b16901T	'ABCDEFGGabcdefg0123456789&?!.,'
46	Times New Roman Bold Italic «Esc»(Symbol set«Esc»(s1p«size»v1s3b16901T	'ABCDEFGGabcdefg0123456789&?!.,'
47	Helvetica «Esc»(Symbol set«Esc»(s1p«size»v0s0b24580T	'ABCDEFGGabcdefg0123456789&?!.,'
48	Helvetica Bold «Esc»(Symbol set«Esc»(s1p«size»v0s3b24580T	'ABCDEFGGabcdefg0123456789&?!.,'
49	Helvetica Oblique «Esc»(Symbol set«Esc»(s1p«size»v1s0b24580T	'ABCDEFGGabcdefg0123456789&?!.,'
50	Helvetica Bold Oblique «Esc»(Symbol set«Esc»(s1p«size»v1s3b24580T	'ABCDEFGGabcdefg0123456789&?!.,'
51	Helvetica Narrow «Esc»(Symbol set«Esc»(s1p«size»v4s0b24580T	'ABCDEFGGabcdefg0123456789&?!.,'

Resident Fonts

Position	Font Name	Print Sample
52	Helvetica Narrow Bold «Esc»(Symbol set«Esc»(s1p«size»v4s3b24580T	'ABCDEFGHabcdefgh0123456789&?!,,'
53	Helvetica Narrow Oblique «Esc»(Symbol set«Esc»(s1p«size»v5s0b24580T	'ABCDEFGHabcdefgh0123456789&?!,,'
54	Helvetica Narrow Bold Oblique «Esc»(Symbol set«Esc»(s1p«size»v5s3b24580T	'ABCDEFGHabcdefgh0123456789&?!,,'
55	Palatino Roman «Esc»(Symbol set«Esc»(s1p«size»v0s0b24591T	'ABCDEFGHabcdefgh0123456789&?!,,'
56	Palatino Bold «Esc»(Symbol set«Esc»(s1p«size»v0s3b24591T	'ABCDEFGHabcdefgh0123456789&?!,,'
57	Palatino Italic «Esc»(Symbol set«Esc»(s1p«size»v1s0b24591T	'ABCDEFGHabcdefgh0123456789&?!,,'
58	Palatino Bold Italic «Esc»(Symbol set«Esc»(s1p«size»v1s3b24591T	'ABCDEFGHabcdefgh0123456789&?!,,'
59	ITC Avant Garde Book «Esc»(Symbol set«Esc»(s1p«size»v0s0b24607T	'ABCDEFGHabcdefgh0123456789&?!,,'
60	ITC Avant Garde DemiBold «Esc»(Symbol set«Esc»(s1p«size»v0s2b24607T	'ABCDEFGHabcdefgh0123456789&?!,,'
61	ITC Avant Garde Book Oblique «Esc»(Symbol set«Esc»(s1p«size»v1s0b24607T	'ABCDEFGHabcdefgh0123456789&?!,,'
62	ITC Avant Garde DemiBold Oblique «Esc»(Symbol set«Esc»(s1p«size»v1s2b24607T	'ABCDEFGHabcdefgh0123456789&?!,,'
63	ITC Bookman Light «Esc»(Symbol set«Esc»(s1p«size»v0s-3b24623T	'ABCDEFGHabcdefgh0123456789&?!,,'
64	ITC Bookman DemiBold «Esc»(Symbol set«Esc»(s1p«size»v0s2b24623T	'ABCDEFGHabcdefgh0123456789&?!,,'
65	ITC Bookman Light Italic «Esc»(Symbol set«Esc»(s1p«size»v1s-3b24623T	'ABCDEFGHabcdefgh0123456789&?!,,'
66	ITC Bookman DemiBold Italic «Esc»(Symbol set«Esc»(s1p«size»v1s2b24623T	'ABCDEFGHabcdefgh0123456789&?!,,'
67	New Century Schoolbook Roman «Esc»(Symbol set«Esc»(s1p«size»v0s0b24703T	'ABCDEFGHabcdefgh0123456789&?!,,'
68	New Century Schoolbook Bold «Esc»(Symbol set«Esc»(s1p«size»v0s3b24703T	'ABCDEFGHabcdefgh0123456789&?!,,'

Resident Fonts

Position	Font Name	Print Sample
86	Naskh «Esc»(Symbol set«Esc»(s0p«pitch»h0s0b4124T	ABCDEFGFGabcdefg0123456789&?!.,
87	Naskh Bold «Esc»(Symbol set«Esc»(s0p«pitch»h0s3b4124T	ABCDEFGFGabcdefg0123456789&?!.,
88	Koufi «Esc»(Symbol set«Esc»(s0p«pitch»h0s0b4264T	ABCDEFGFGabcdefg0123456789&?!.,
89	Koufi Bold «Esc»(Symbol set«Esc»(s0p«pitch»h0s3b4264T	ABCDEFGFGabcdefg0123456789&?!.,
90	Courier PS «Esc»(Symbol set«Esc»(s0p«pitch»h0s0b24579T	'ABCDEFGFGabcdefg0123456789&?!.,'
91	Courier PS Bold «Esc»(Symbol set«Esc»(s0p«pitch»h0s3b24579T	'ABCDEFGFGabcdefg0123456789&?!.,'
92	Courier PS Oblique «Esc»(Symbol set«Esc»(s0p«pitch»h1s0b24579T	'ABCDEFGFGabcdefg0123456789&?!.,'
93	Courier PS Bold Oblique «Esc»(Symbol set«Esc»(s0p«pitch»h1s3b24579T	'ABCDEFGFGabcdefg0123456789&?!.,'
94	Line Printer «Esc»(8U«Esc»(s0p16.67h8.48v0s0b0T	'ABCDEFGFGabcdefg0123456789&?!.,'

PostScript Font Listing

Internal Fonts:

AlbertusMT	ABCDEF abcdefg 0123456789 &?!\$,%
AlbertusMT-Italic	ABCDEF abcdefg 0123456789 &?!\$,%
AlbertusMT-Light	ABCDEF abcdefg 0123456789 &?!\$,%
AntiqueOlive-Bold	ABCDEF abcdefg 0123456789 &?!\$,%
AntiqueOlive-Compact	ABCDEF abcdefg 0123456789 &?!\$,%
AntiqueOlive-Italic	ABCDEF abcdefg 0123456789 &?!\$,%
AntiqueOlive-Roman	ABCDEF abcdefg 0123456789 &?!\$,%
Apple-Chancery	ABCDEF abcdefg 0123456789 &?!\$,%
Arial-BoldItalicMT	ABCDEF abcdefg 0123456789 &?!\$,%
Arial-BoldMT	ABCDEF abcdefg 0123456789 &?!\$,%
Arial-ItalicMT	ABCDEF abcdefg 0123456789 &?!\$,%
ArialMT	ABCDEF abcdefg 0123456789 &?!\$,%
AvantGarde-Book	ABCDEF abcdefg 0123456789 &?!\$,%
AvantGarde-BookOblique	ABCDEF abcdefg 0123456789 &?!\$,%
AvantGarde-Demi	ABCDEF abcdefg 0123456789 &?!\$,%
AvantGarde-DemiOblique	ABCDEF abcdefg 0123456789 &?!\$,%
Bodoni	ABCDEF abcdefg 0123456789 &?!\$,%
Bodoni-Bold	ABCDEF abcdefg 0123456789 &?!\$,%
Bodoni-BoldItalic	ABCDEF abcdefg 0123456789 &?!\$,%
Bodoni-Italic	ABCDEF abcdefg 0123456789 &?!\$,%
Bodoni-Poster	ABCDEF abcdefg 0123456789 &?!\$,%
Bodoni-PosterCompressed	ABCDEF abcdefg 0123456789 &?!\$,%
Bookman-Demi	ABCDEF abcdefg 0123456789 &?!\$,%
Bookman-DemiItalic	ABCDEF abcdefg 0123456789 &?!\$,%
Bookman-Light	ABCDEF abcdefg 0123456789 &?!\$,%
Bookman-LightItalic	ABCDEF abcdefg 0123456789 &?!\$,%
Carta	ABCDEF abcdefg 0123456789 &?!\$,%
Chicago	ABCDEF abcdefg 0123456789 &?!\$,%
Clarendon	ABCDEF abcdefg 0123456789 &?!\$,%
Clarendon-Bold	ABCDEF abcdefg 0123456789 &?!\$,%
Clarendon-Light	ABCDEF abcdefg 0123456789 &?!\$,%
CooperBlack	ABCDEF abcdefg 0123456789 &?!\$,%
CooperBlack-Italic	ABCDEF abcdefg 0123456789 &?!\$,%
Copperplate-ThirtyThreeBC	ABCDEF abcdefg 0123456789 &?!\$,%
Copperplate-ThirtyTwoBC	ABCDEF abcdefg 0123456789 &?!\$,%
Coronet-Regular	ABCDEF abcdefg 0123456789 &?!\$,%
Courier	ABCDEF abcdefg 0123456789 &?!\$,%
Courier-Bold	ABCDEF abcdefg 0123456789 &?!\$,%
Courier-BoldOblique	ABCDEF abcdefg 0123456789 &?!\$,%
Courier-Oblique	ABCDEF abcdefg 0123456789 &?!\$,%
Eurostile	ABCDEF abcdefg 0123456789 &?!\$,%
Eurostile-Bold	ABCDEF abcdefg 0123456789 &?!\$,%
Eurostile-BoldExtendedTwo	ABCDEF abcdefg 0123456789 &?!\$,%
Eurostile-ExtendedTwo	ABCDEF abcdefg 0123456789 &?!\$,%
Geneva	ABCDEF abcdefg 0123456789 &?!\$,%
GillSans	ABCDEF abcdefg 0123456789 &?!\$,%
GillSans-Bold	ABCDEF abcdefg 0123456789 &?!\$,%
GillSans-BoldCondensed	ABCDEF abcdefg 0123456789 &?!\$,%
GillSans-BoldItalic	ABCDEF abcdefg 0123456789 &?!\$,%
GillSans-Condensed	ABCDEF abcdefg 0123456789 &?!\$,%
GillSans-ExtraBold	ABCDEF abcdefg 0123456789 &?!\$,%
GillSans-Italic	ABCDEF abcdefg 0123456789 &?!\$,%
GillSans-Light	ABCDEF abcdefg 0123456789 &?!\$,%
GillSans-LightItalic	ABCDEF abcdefg 0123456789 &?!\$,%
Goudy	ABCDEF abcdefg 0123456789 &?!\$,%
Goudy-Bold	ABCDEF abcdefg 0123456789 &?!\$,%
Goudy-BoldItalic	ABCDEF abcdefg 0123456789 &?!\$,%
Goudy-ExtraBold	ABCDEF abcdefg 0123456789 &?!\$,%
Goudy-Italic	ABCDEF abcdefg 0123456789 &?!\$,%
GreekMono737	ABCDEF abcdefg 0123456789 &?!\$,%
GreekMono737-Bold	ABCDEF abcdefg 0123456789 &?!\$,%
GreekMono737-BoldItalic	ABCDEF abcdefg 0123456789 &?!\$,%
GreekMono737-Italic	ABCDEF abcdefg 0123456789 &?!\$,%
GreekMono851	ABCDEF abcdefg 0123456789 &?!\$,%

PostScript Font Listing


Internal Fonts (continued):


GreekMono851-Bold	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekMono851-BoldItalic	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekMono851-Italic	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekMono8859-7	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekMono8859-7Bold	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekMono8859-7BoldItalic	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekMono8859-7Italic	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSans737	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSans737-Bold	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSans737-BoldItalic	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSans737-Italic	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSans851	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSans851-Bold	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSans851-BoldItalic	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSans851-Italic	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSans8859-7	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSans8859-7Bold	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSans8859-7BoldItalic	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSans8859-7Italic	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSerif737	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSerif737-Bold	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSerif737-BoldItalic	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSerif737-Italic	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSerif851	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSerif851-Bold	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSerif851-BoldItalic	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSerif851-Italic	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSerif8859-7	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSerif8859-7Bold	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSerif8859-7BoldItalic	ABCDEFGH abcdefg 0123456789 &?!\$.,
GreekSerif8859-7Italic	ABCDEFGH abcdefg 0123456789 &?!\$.,
Helvetica	ABCDEFGH abcdefg 0123456789 &?!\$.,€
Helvetica-Bold	ABCDEFGH abcdefg 0123456789 &?!\$.,€
Helvetica-BoldOblique	ABCDEFGH abcdefg 0123456789 &?!\$.,€
Helvetica-Condensed	ABCDEFGH abcdefg 0123456789 &?!\$.,€
Helvetica-Condensed-Bold	ABCDEFGH abcdefg 0123456789 &?!\$.,€
Helvetica-Condensed-BoldOblique	ABCDEFGH abcdefg 0123456789 &?!\$.,€
Helvetica-Condensed-Oblique	ABCDEFGH abcdefg 0123456789 &?!\$.,€
Helvetica-Narrow	ABCDEFGH abcdefg 0123456789 &?!\$.,€
Helvetica-Narrow-Bold	ABCDEFGH abcdefg 0123456789 &?!\$.,€
Helvetica-Narrow-BoldOblique	ABCDEFGH abcdefg 0123456789 &?!\$.,€
Helvetica-Narrow-Oblique	ABCDEFGH abcdefg 0123456789 &?!\$.,€
Helvetica-Oblique	ABCDEFGH abcdefg 0123456789 &?!\$.,€
HoeflerText-Black	ABCDEFGH abcdefg 0123456789 &?!\$.,€
HoeflerText-BlackItalic	ABCDEFGH abcdefg 0123456789 &?!\$.,€
HoeflerText-Italic	ABCDEFGH abcdefg 0123456789 &?!\$.,€
HoeflerText-Ornaments	
HoeflerText-Regular	ABCDEFGH abcdefg 0123456789 &?!\$.,€
JoannaMT	ABCDEFGH abcdefg 0123456789 &?!\$.,€
JoannaMT-Bold	ABCDEFGH abcdefg 0123456789 &?!\$.,€
JoannaMT-BoldItalic	ABCDEFGH abcdefg 0123456789 &?!\$.,€
JoannaMT-Italic	ABCDEFGH abcdefg 0123456789 &?!\$.,€
LetterGothic	ABCDEFGH abcdefg 0123456789 &?!\$.,€
LetterGothic-Bold	ABCDEFGH abcdefg 0123456789 &?!\$.,€
LetterGothic-BoldSlanted	ABCDEFGH abcdefg 0123456789 &?!\$.,€
LetterGothic-Slanted	ABCDEFGH abcdefg 0123456789 &?!\$.,€
LubalinGraph-Book	ABCDEFGH abcdefg 0123456789 &?!\$.,€
LubalinGraph-BookOblique	ABCDEFGH abcdefg 0123456789 &?!\$.,€
LubalinGraph-Demi	ABCDEFGH abcdefg 0123456789 &?!\$.,€
LubalinGraph-DemiOblique	ABCDEFGH abcdefg 0123456789 &?!\$.,€
Marigold	ABCDEFGH abcdefg 0123456789 &?!\$.,€
MonaLisa-Recut	ABCDEFGHI abcdefg 0123456789 &?!\$.,€
Monaco	ABCDEFGH abcdefg 0123456789 &?!\$.,€
NewCenturySchlbk-Bold	ABCDEFGH abcdefg 0123456789 &?!\$.,€


Internal Fonts (continued):

Page 3

Repeating Defects

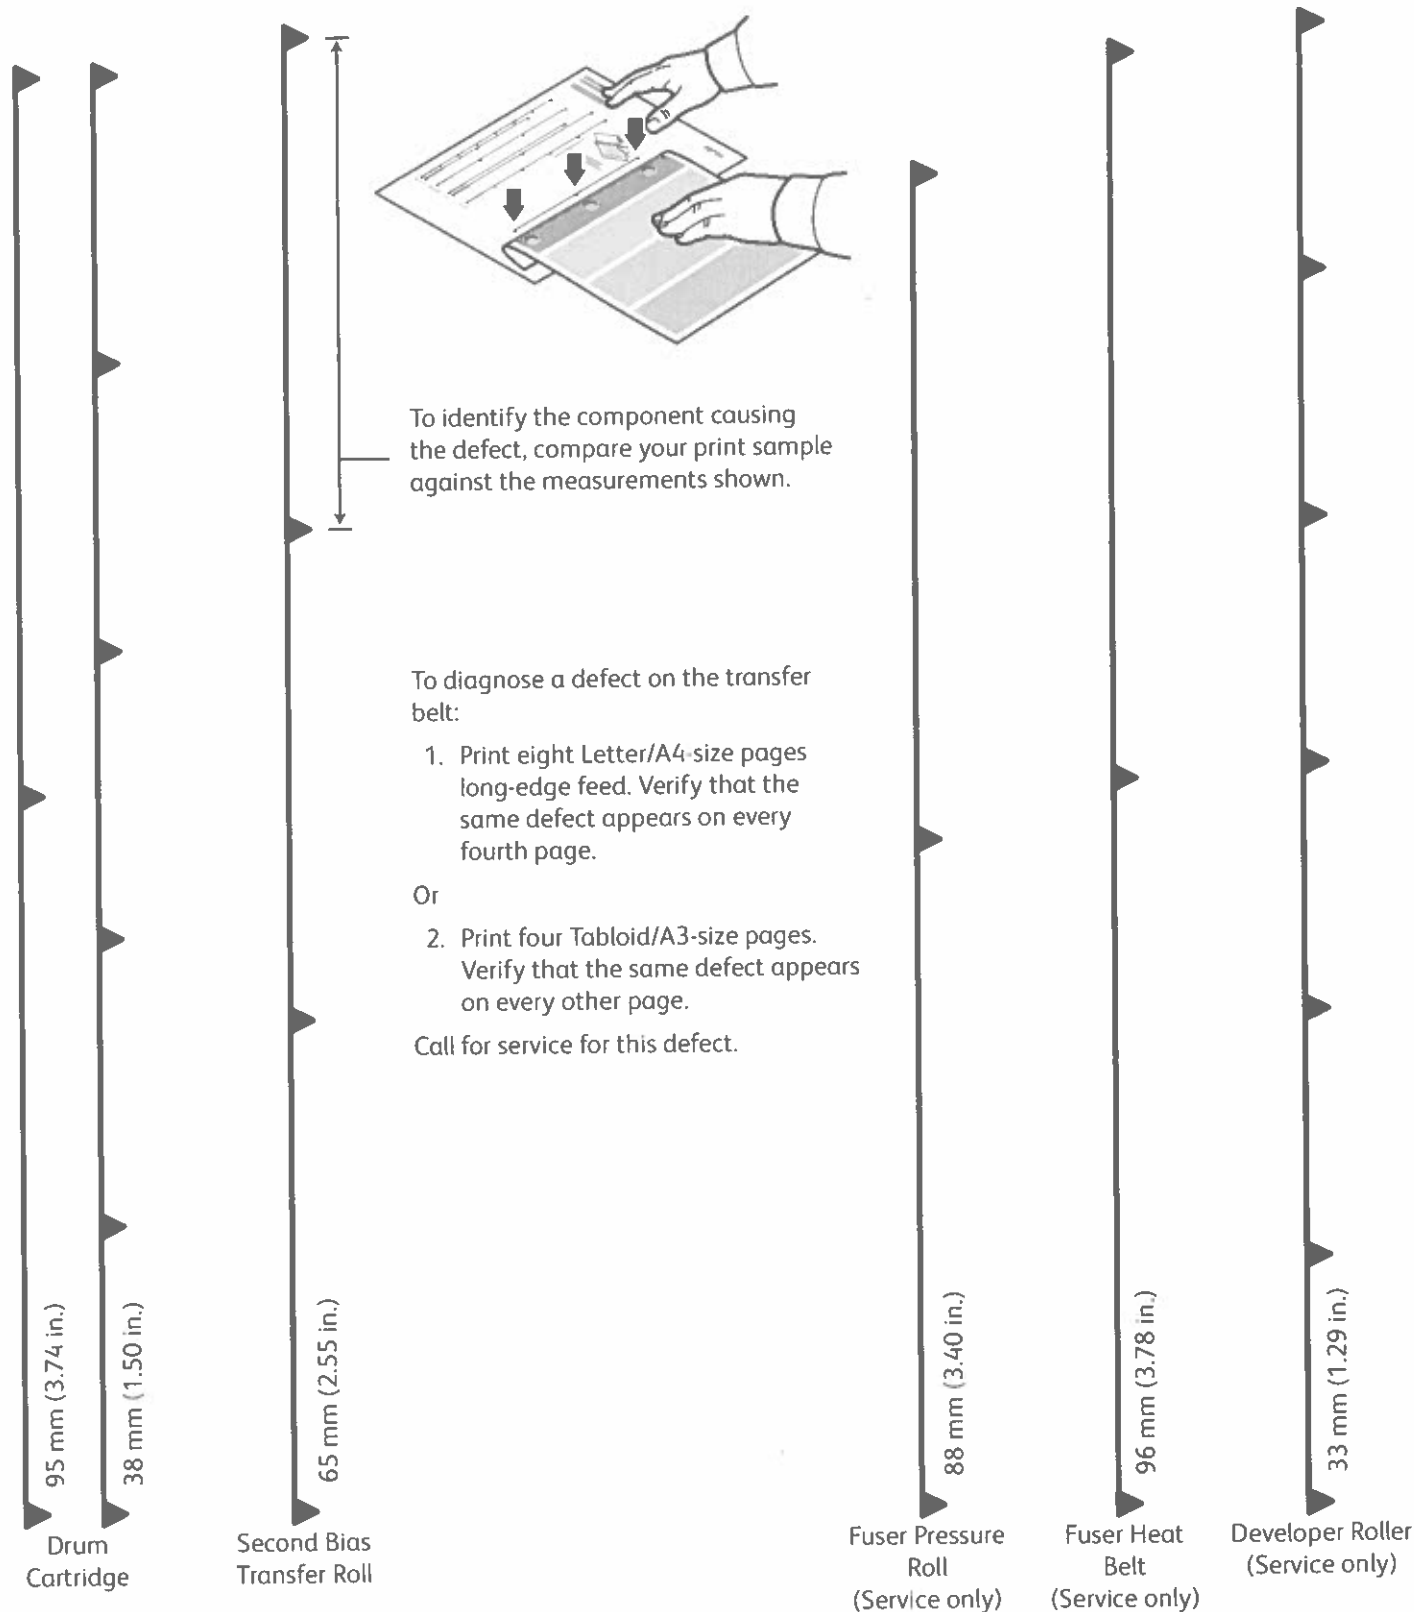

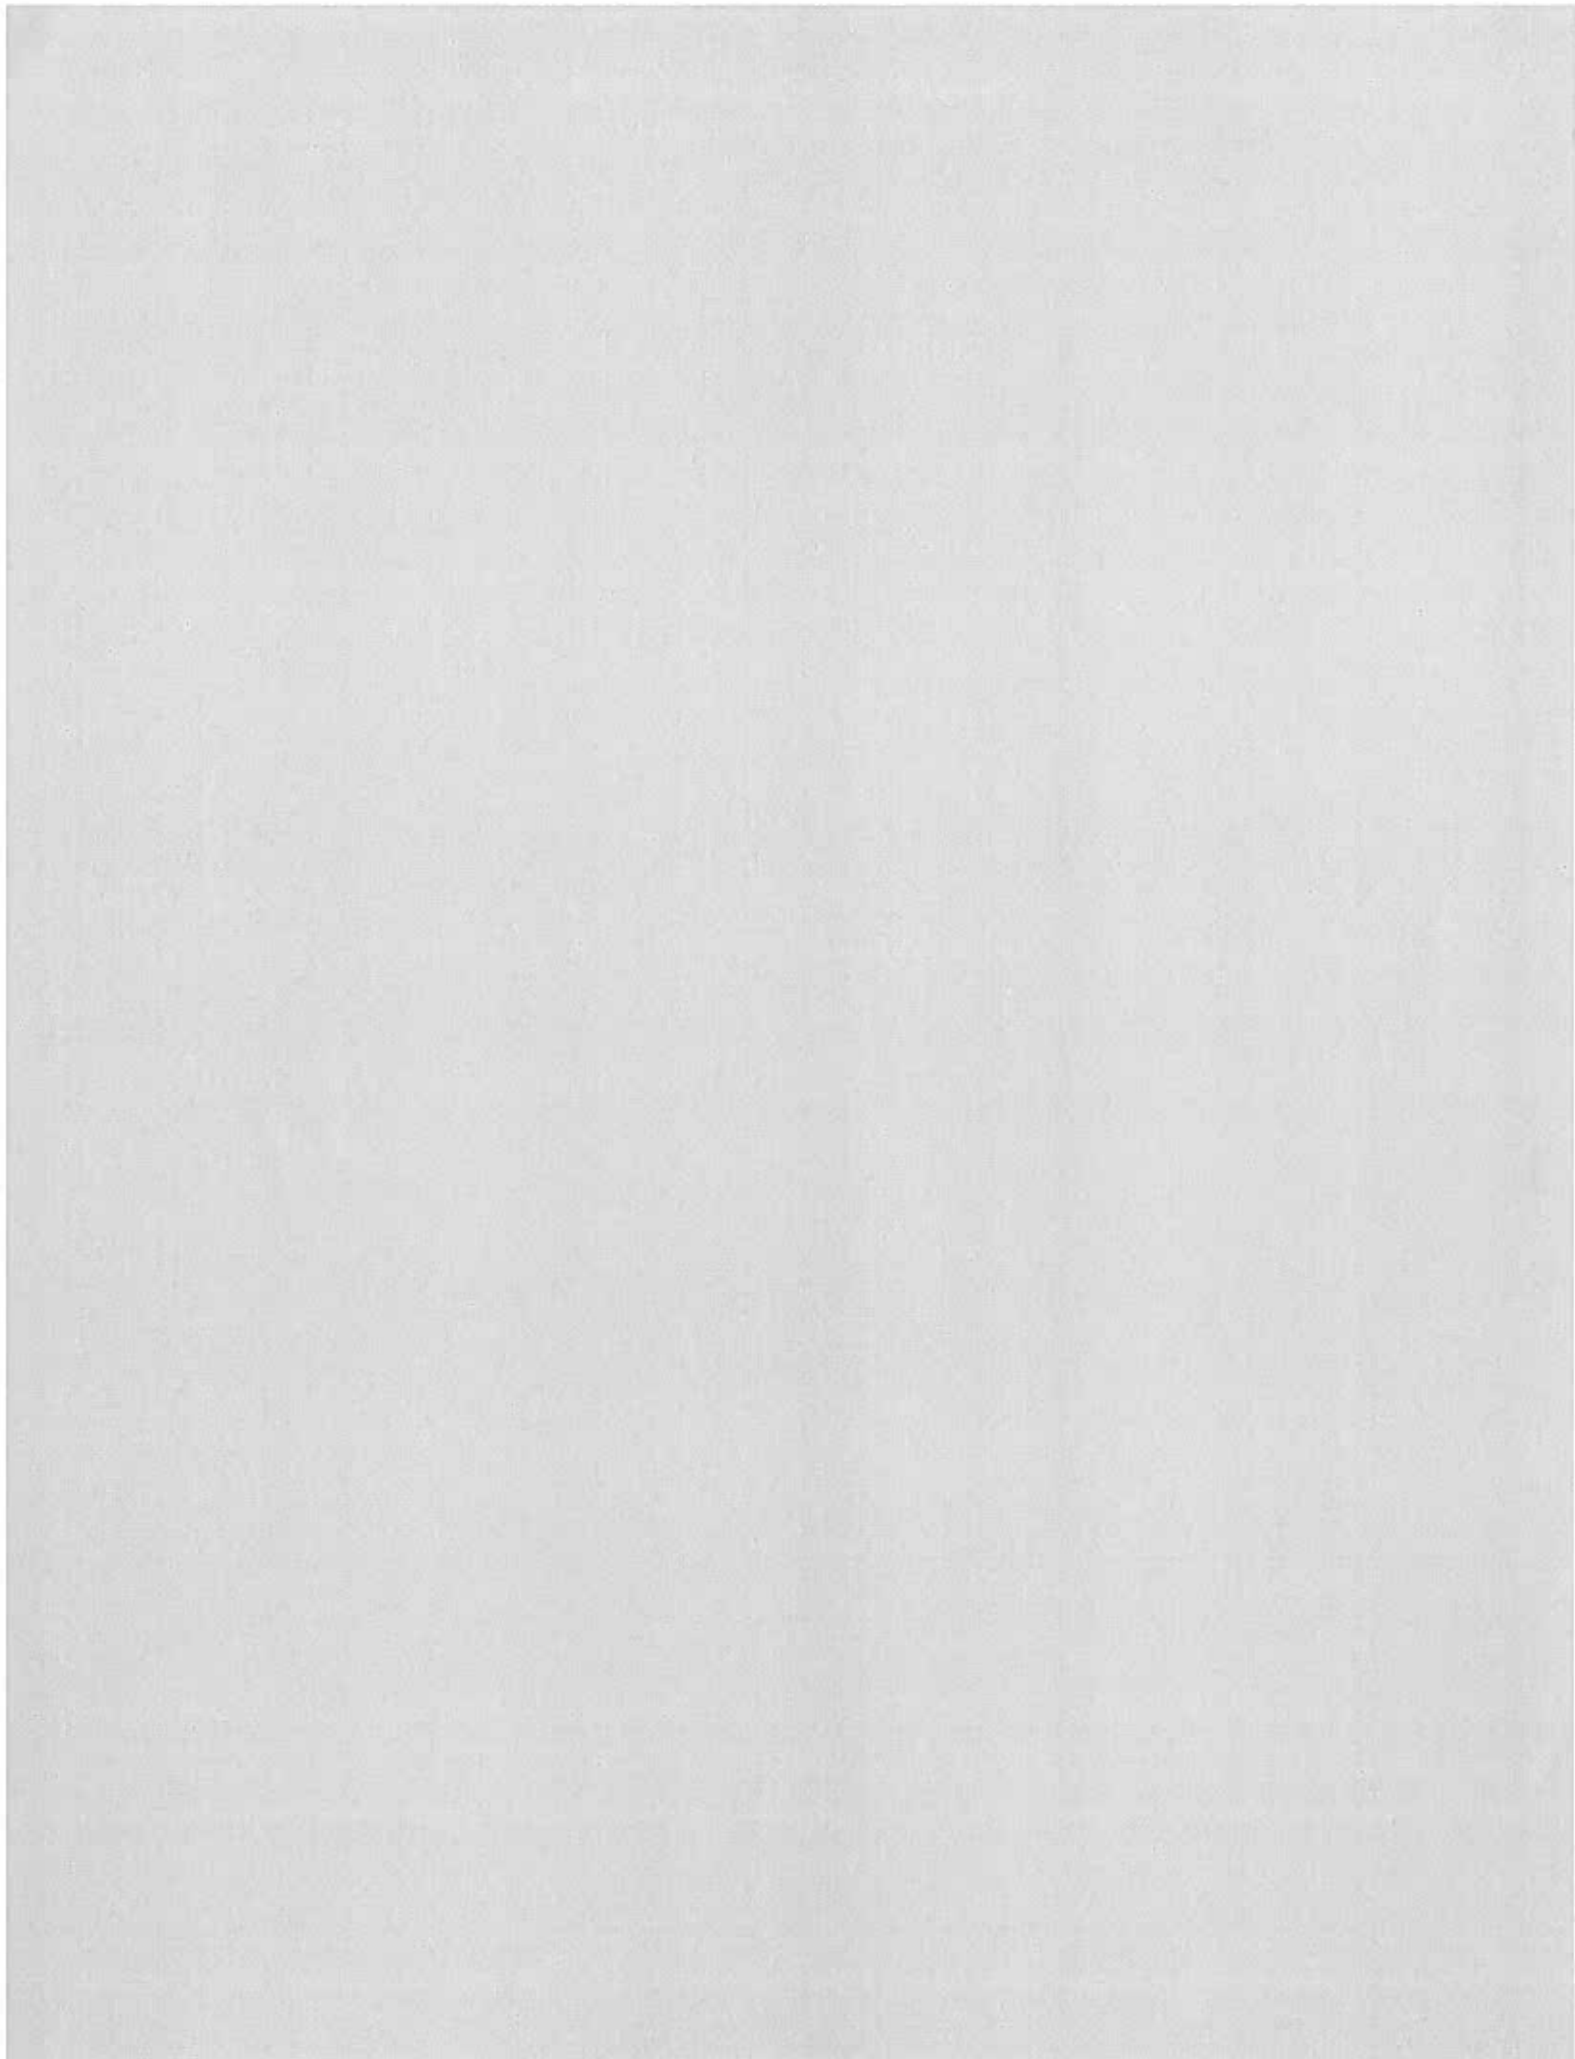

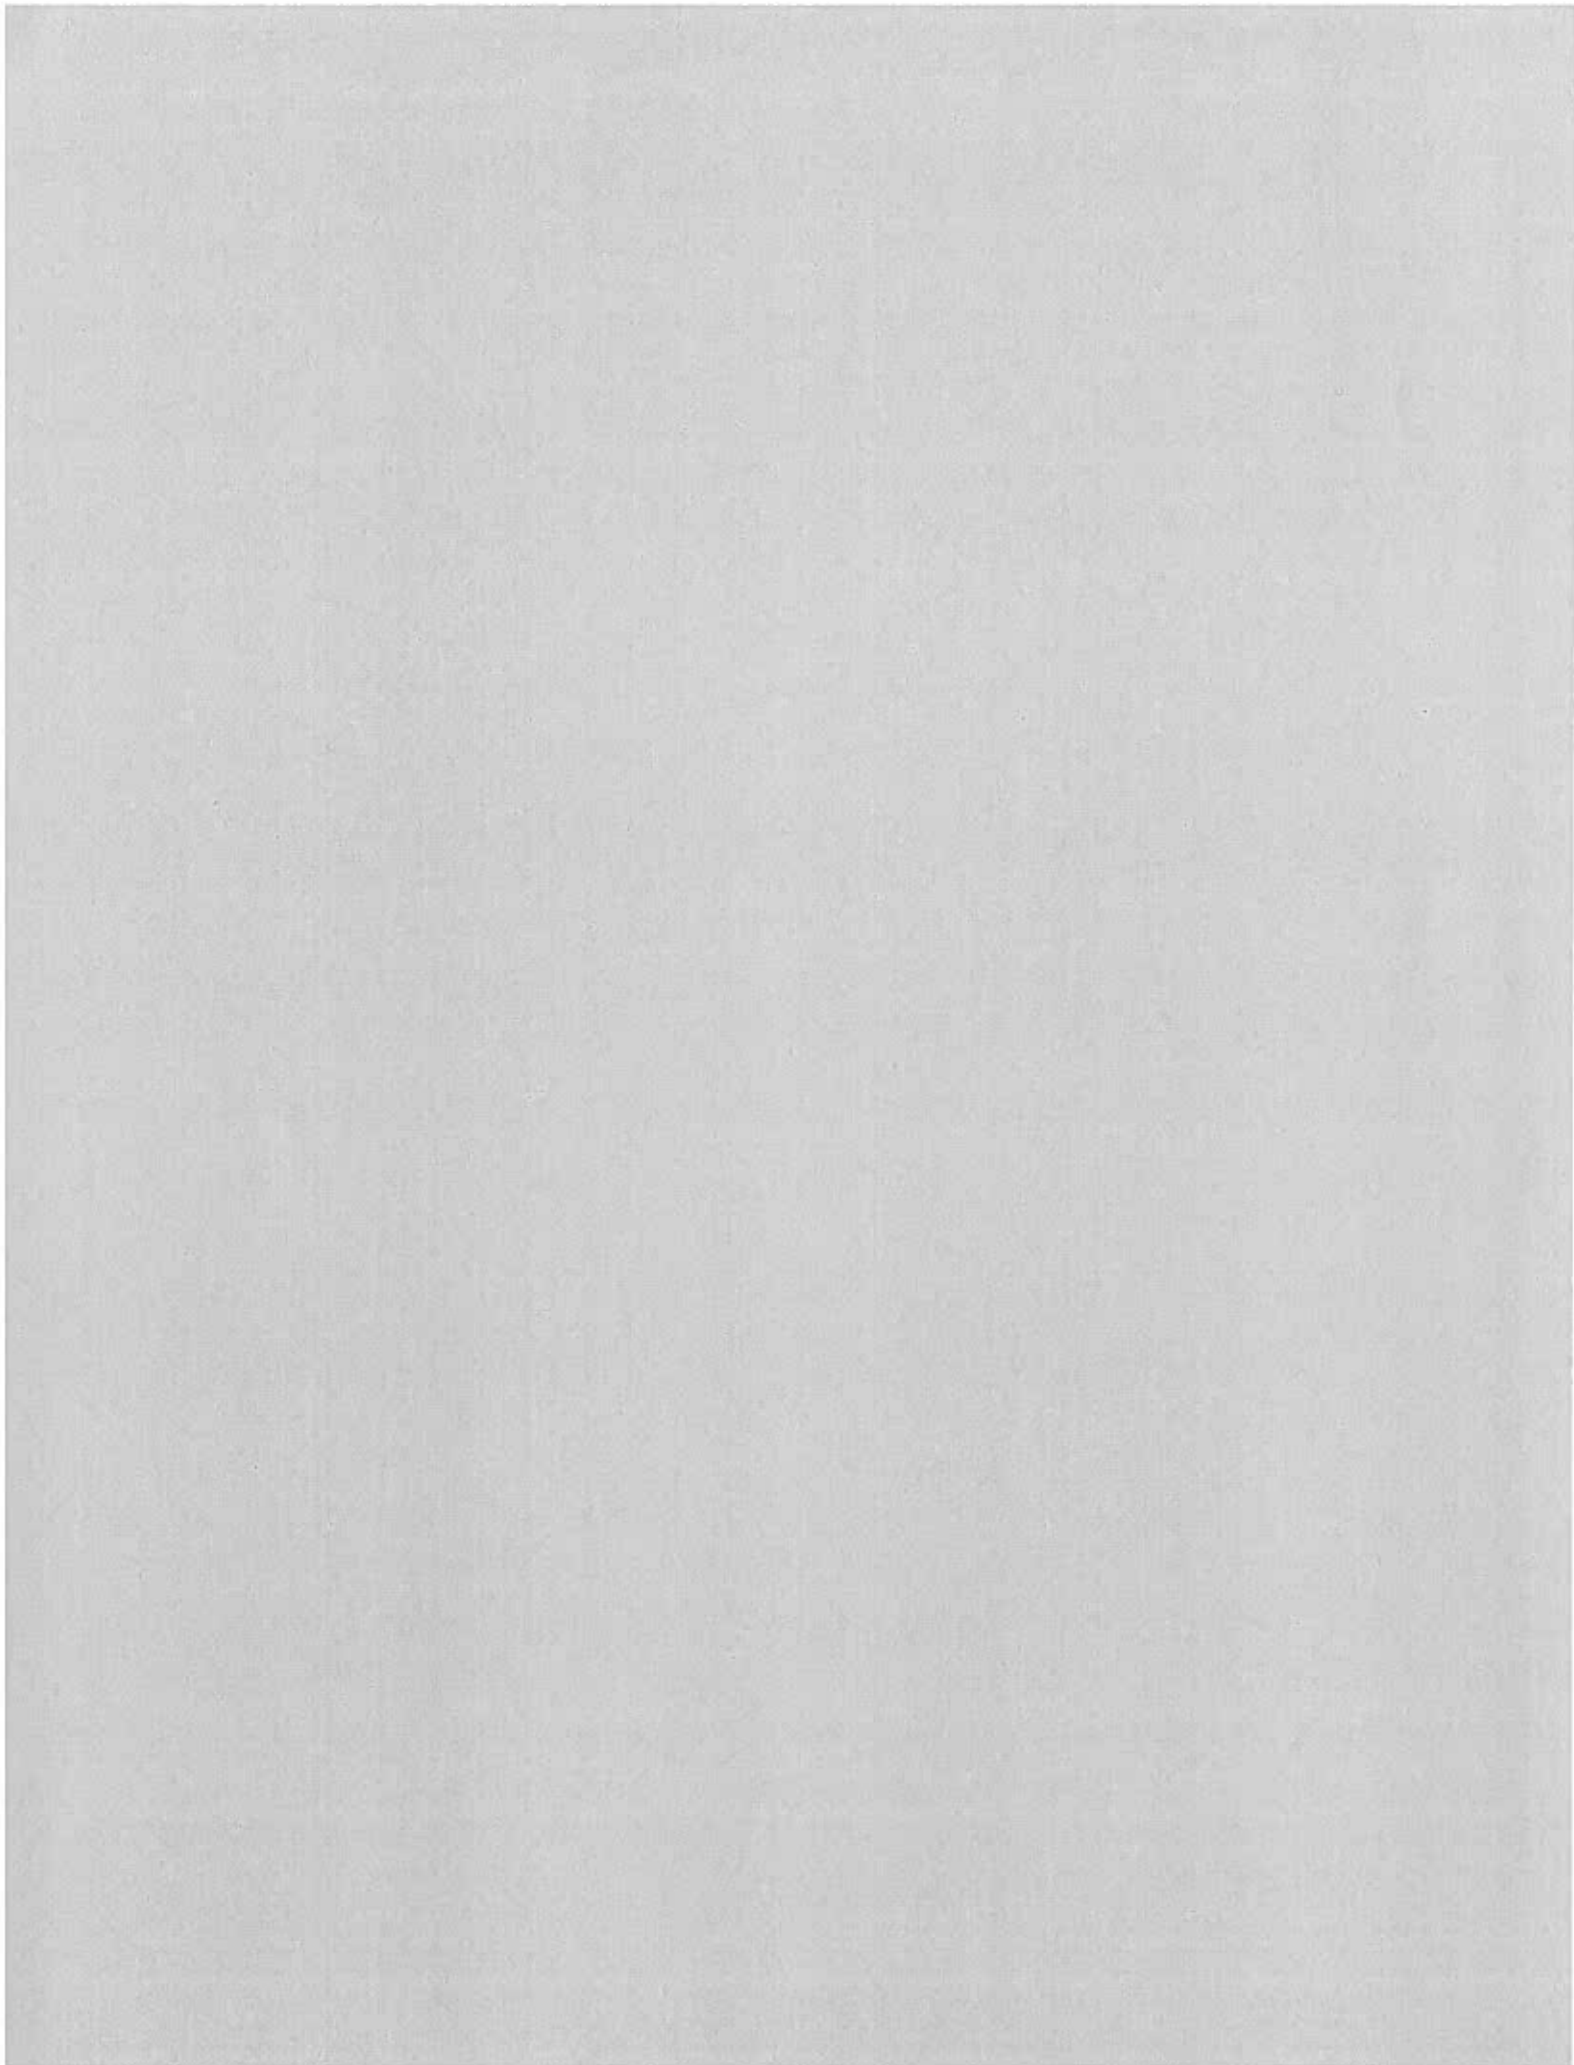

Save Big With Our Spring Sale

BOOST YOUR FLOWER POWER

April showers bring May flowers—so get yours blooming today with 20% off perennials and annuals, now through June 1.



GET DIGGING...

... and weeding and clipping with new garden tools and accessories. We've got great deals on super-sharp shears, shiny spades and shovels, and gloves and clogs to boot. But why stop there? Don't forget to visit our showroom of garden accents featuring bird baths, windchimes, gazing balls, even benches. You won't want to go back indoors!



PLANT FOR WINGED WILDLIFE

Did you know that certain plants attract hummingbirds, butterflies, bluebirds and other winged species? Talk to our experts about how to create a haven for these delicate beauties. You'll be amazed by the colorful new visitors who will come to sample the pollen and alight on soft flower petals.



ALPINE RIDGE
GARDEN  **CENTERS**

info@alpinegardencenter.com

THE ALPINE RIDGE APPROACH TO GARDENING

We're about sustainable gardening, embracing growth without the use of chemicals. Our organic compost replenishes the soil with natural nutrients. We have plants that will help keep pesky insects away, without the need for pesticides. Even our containers are made of recycled paper products that will nurture your plants. It's our pledge to keep your gardens, lawns and all who visit them free from pollutants and full of beauty.

NEWSLETTER SIGN-UP

Sign up today for gardening tips and member discounts delivered to your email.



xerox™

Printed on a Xerox® AltaLink® C8100 Series Color Multifunction Printer. © 2019 Xerox Corporation. All rights reserved. Xerox® and AltaLink® are trademarks of Xerox Corporation in the United States and/or other countries. BR27311 AC8PS-03UA

Billing Summary

System Information

Machine Name:	IPP	Software Versions	
Machine Serial Number:	3775791038	Device Software:	122.009.025.20910
Power On Impressions:	4	Patch Version:	None
		Network Controller:	122.009.20910
		UI Panel Firmware:	003.004.00000
		Marking Engine:	030.045.000
		Document Feeder:	023.026.000
		Finisher:	000.000.000
		Fax:	003.021.026
		Scanner:	016.024.015

Billing Meters


Fax		Plain Paper:	11673
Embedded Fax Images Sent:	1400	Transparency:	11
Embedded Fax Impressions:	3752	Prepunched:	107
		Recycled:	3
		Heavyweight:	18
Copy			
Black Copied Impressions:	641		
Color Copied Impressions:	655		
Print			
Black Printed Impressions:	8385		
Color Printed Impressions:	5810		
Scan			
Network Scanning Images Sent:	303		
E-mail Images Sent:	102		

Device Totals

Black Impressions:	12939
Color Impressions:	6464
Total Impressions:	19403

Control Panel

Available apps can vary based on your printer setup. For details about apps and features, refer to the *User Guide*.

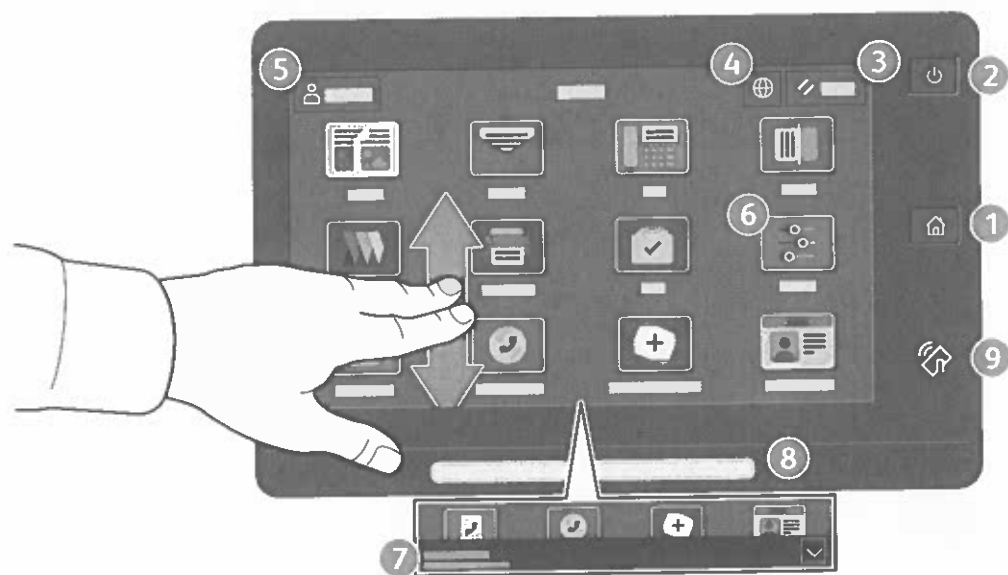

- 1 **Home** returns to the main app screen.
- 2 **Power/Wake** starts the printer or provides options to sleep, restart or power off the printer.
- 3 **Reset** restores settings to their default values in all apps.
- 4 **Language** provides choice of screen languages.
- 5 **Log In** provides special access to tools and settings.
- 6 **Device app** provides access to printer information and settings.
- 7 **Notification banner** shows printer status and warnings. To see all notifications, touch the banner. To close the banner, touch the down arrow.
- 8 **Status LED** indicates printer status. For detailed information, refer to the *User Guide*.
- 9 **NFC Area** allows pairing with a mobile device to print or scan from an app.

Device app

The Device app provides access to supplies status, printer information, and settings. Some menus and settings require log in with the administrator name and password.



Billing and Usage Information

In the Device features menu, to view basic impression counts, touch **Billing/Usage**. To view detailed usage counts, touch **Usage Counters**. The list provides detailed impression count categories.




Embedded Web Server

The Xerox® Embedded Web Server enables you to access printer configuration details, paper and supplies status, job status, and diagnostic functions over a network. You can also manage fax, email, and address books.


To connect, in a Web browser, type the printer IP address. The network IPv4 address is available on the control panel touch screen. Touch **Device** app > **About**, then scroll down.

For details on using the Embedded Web Server, refer to the *User Guide* located on Xerox.com.

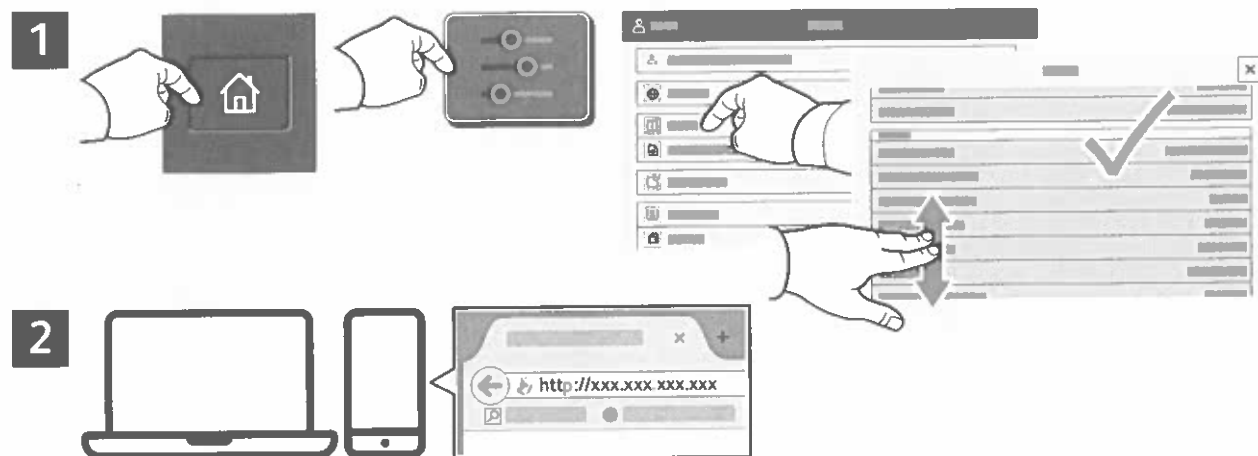

App Gallery



The Xerox App Gallery has a growing collection of productivity apps that you can install on your printer. Find the app on your home screen and create your login directly, or go to www.xerox.com/appgallery to log in and add your device. To simplify app installation, use the same name for your app gallery login credentials that you used for the printer login.

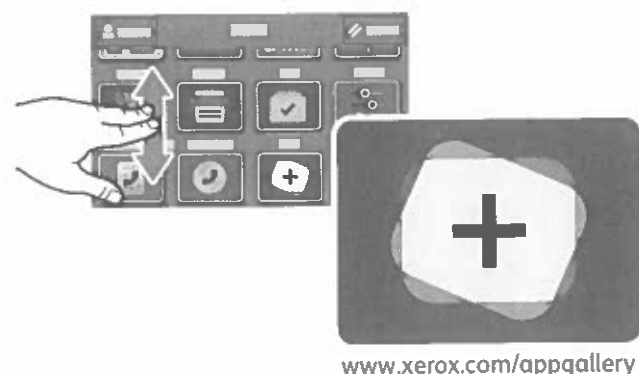

Printer Tour

Optional accessories can be part of your printer setup. For details, refer to the *User Guide*.

Single-Pass Duplex Automatic Document Feeder (DADF)

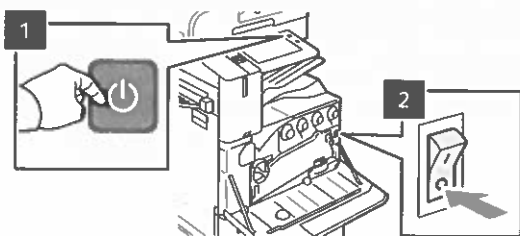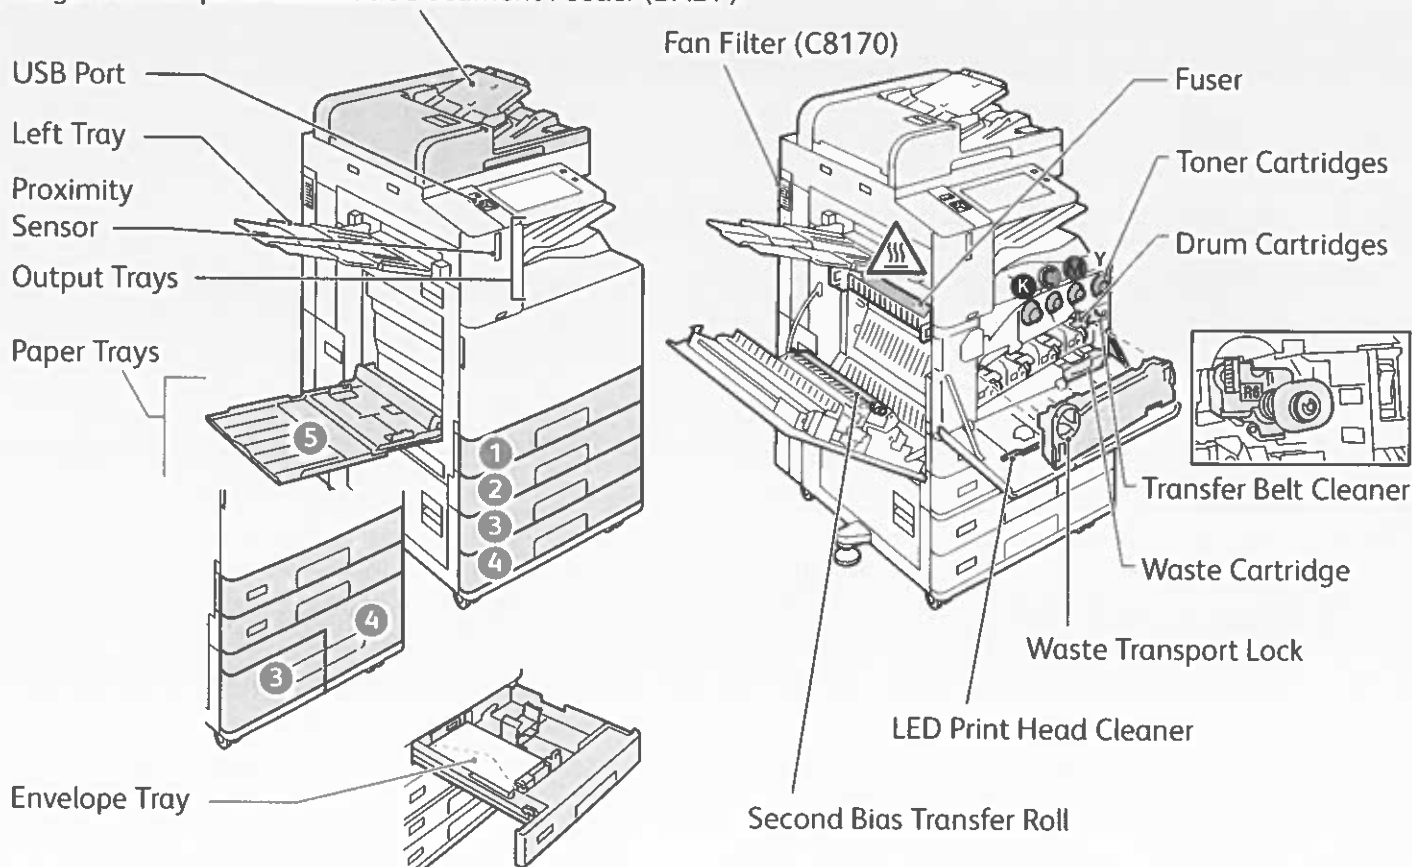

To restart the printer, on the control panel, press the **secondary power switch** (1).

For full printer power off, press the **secondary power switch** (1). Behind the front cover, press the **main power switch** (2).

To select sleep mode, press the **secondary power switch** (1). At the printer control panel touch screen, touch a selection.

Paper Handling


For a complete list of paper that works with your printer, see the Recommended Media List at:

www.xerox.com/rmlna (U. S. and Canada)


www.xerox.com/rmleu (Europe)

For details about trays and paper, refer to the *User Guide*.

Loading Paper

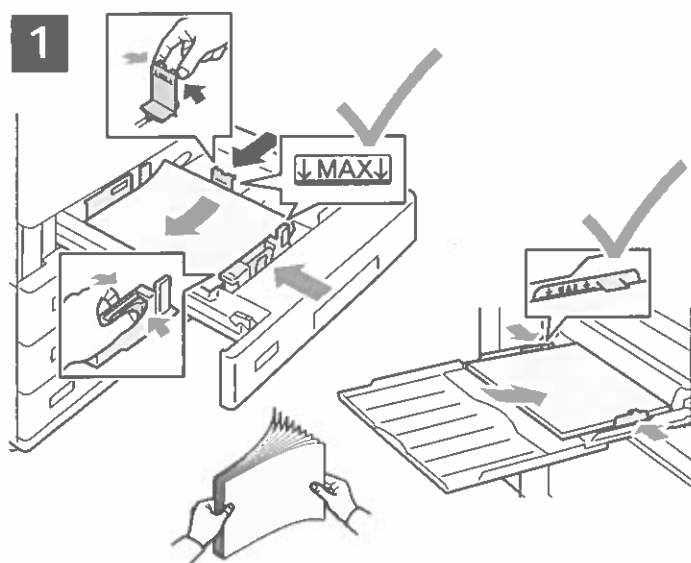

2

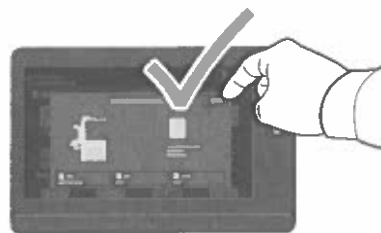

Confirm or change size, type, and color settings if needed.




3



For the best results, fan the edges of the paper. Adjust the guides to fit the paper size. Do not load paper above the maximum fill line.

When printing, select options in the print driver.

Paper Orientation

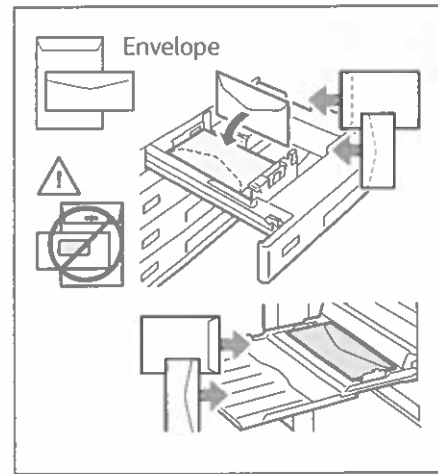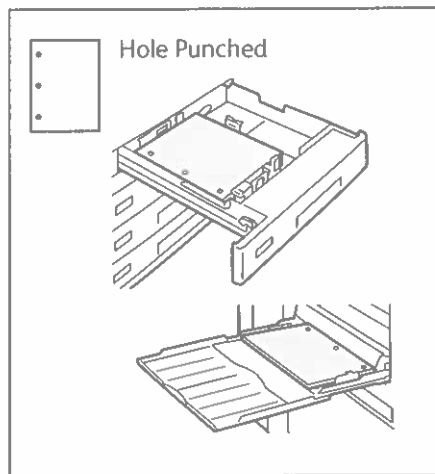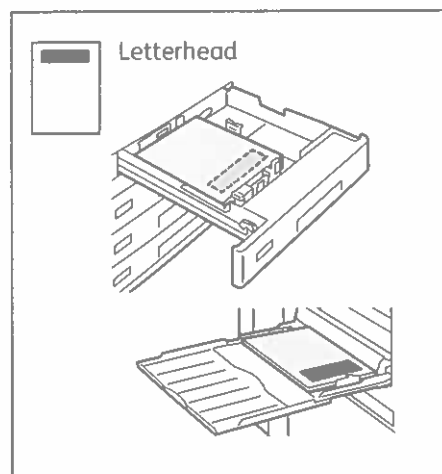

Copying

For details, refer to the *User Guide*.

1




X: 85–432 mm (3.3–17 in.)
Y: 125–297 mm (4.9–11.7 in.)



38–128 g/m²
(26 lb. Text–34 lb. Bond)



≤130 (80 g/m², 20 lb. Bond)
C8170: ≤250

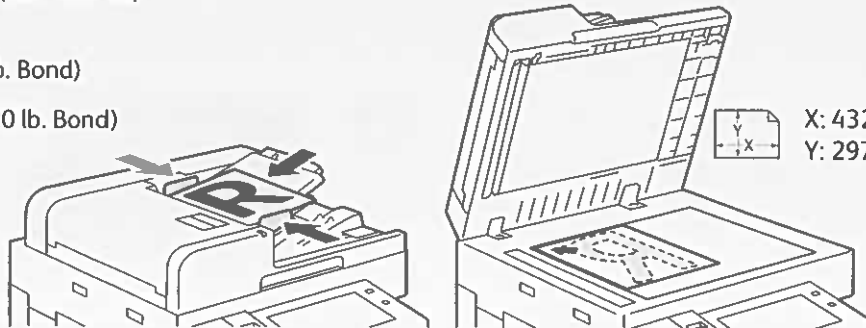

Load the original documents.

2




Touch **Copy**, then select the number of copies.

3



Select feature settings from the list, then touch **Start**.

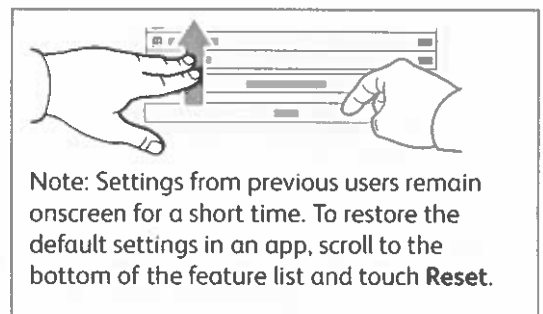

Note: Settings from previous users remain onscreen for a short time. To restore the default settings in an app, scroll to the bottom of the feature list and touch **Reset**.

Scanning and Emailing

If the printer is connected to a network, you can select a destination for the scanned image at the printer control panel.

This guide defines techniques to scan documents without preparing special setups:

- Scanning documents to an email address.
- Scanning documents to a saved Favorite, Address Book listing, or USB Flash Drive.
- Scanning documents to the Default Public folder on the printer hard drive, and retrieving them using your Web browser.

For details and more scan setups, refer to the *User Guide*. For details about address book and workflow template setup, refer to the *System Administrator Guide*.

1




 
X: 85–432 mm (3.3–17 in.)
Y: 125–297 mm (4.9–11.7 in.)



38–128 g/m²
(26 lb. Text–34 lb. Bond)



≤130 (80 g/m², 20 lb. Bond)
C8170: ≤250

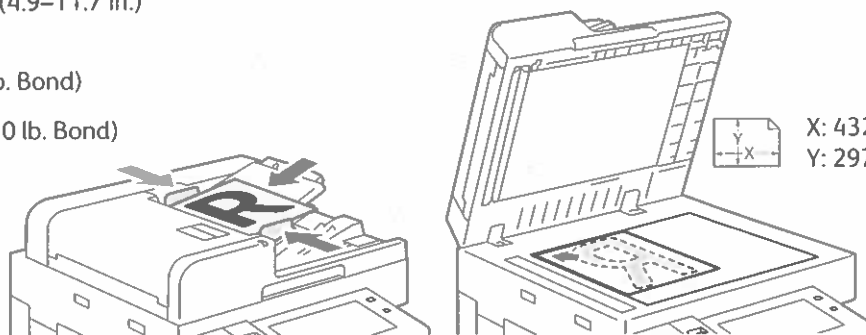

Load the original documents.

2




Press **Home**, then to email the scan, touch **Email**. To scan to the Default Public Folder or a USB Flash Drive, touch **Workflow Scanning**. If your scan destination is stored in the Address Book or saved as a Favorite, touch **Scan To**.


3



For Email, touch **Manual Entry**, type the email address using the touch screen keypad, then touch **Add**. To add more than one email address to the list, touch **Add Recipient**. To type a subject line for the email, touch **Subject**. To select saved email addresses, use the Device Address Book or select from Favorites.

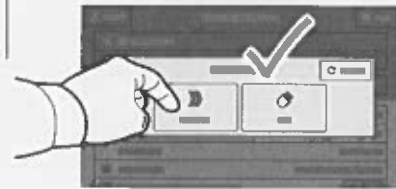

For Workflow Scanning, touch **Default Public Folder**, or insert your USB Flash Drive.

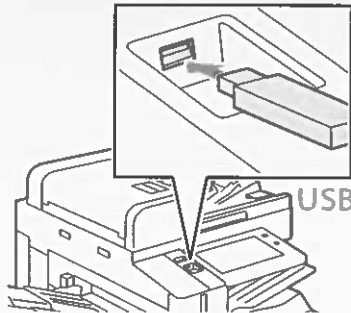

For Scan To, touch a destination type, then enter the appropriate information. To add more than one destination to the list, touch **Add Destination**.

4




Change the settings as needed, then touch **Scan**, or for Email, touch **Send**.




Note: Settings from previous users remain onscreen for a short time. To restore the default settings in an app, scroll to the bottom of the feature list, then touch **Reset**.

Retrieving Scan Files

To download your scanned images from the Default Public Folder on the printer, use the Embedded Web Server. You can set up personal folders and workflow scanning templates in the Embedded Web Server. For details, refer to the *User Guide*.

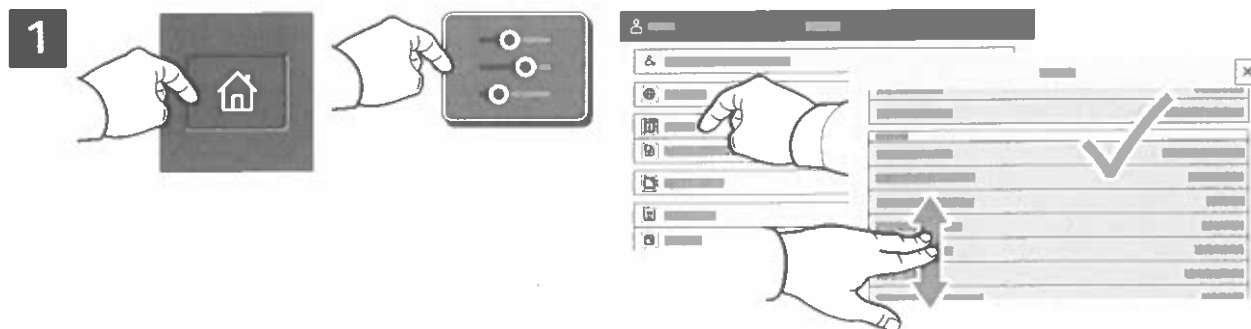

Note the printer IP address on the touch screen. If the IP Address does not appear in the top of the touch screen, press Home, touch **Device** > **About** then scroll to check the IP Address.

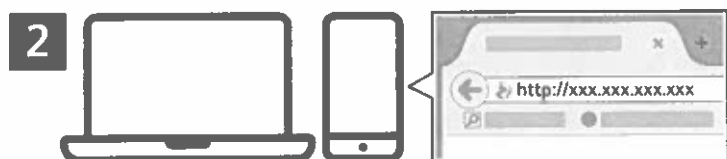

In a Web browser, type the printer IP address, then press **Enter** or **Return**.




Click the **Scan** tab.

4



Select the **Default Public Folder**, then find your scan in the list. To download the scan, click **Go**.

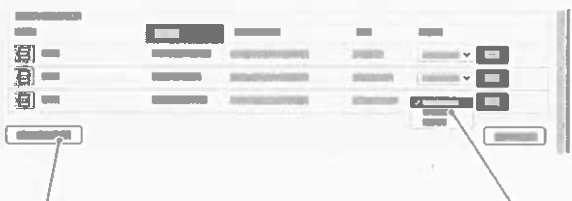

To refresh the list, click **Update View**.

To save the file to your computer, select **Download**.

To print the saved file again, select **Reprint**.

To permanently remove the stored job, select **Delete**.

To open a directory, select **Open**.

Faxing

You can send a fax in one of four ways:

- **Fax** scans the document then sends it directly to a fax machine.
- **Server Fax** scans the document then sends it to a fax server, which transmits the document to a fax machine.
- **Internet Fax** scans the document then emails it to a recipient.
- **LAN Fax** sends the current print job as a fax.

For details, refer to the *User Guide*. For details about LAN Fax, refer to the print driver software. For details about fax setup and advanced settings, refer to the *System Administrator Guide*.

1




X: 85–432 mm (3.3–17 in.)
Y: 125–297 mm (4.9–11.7 in.)



38–128 g/m²
(26 lb. Text–34 lb. Bond)



≤130 (80 g/m², 20 lb. Bond)
C8170: ≤250

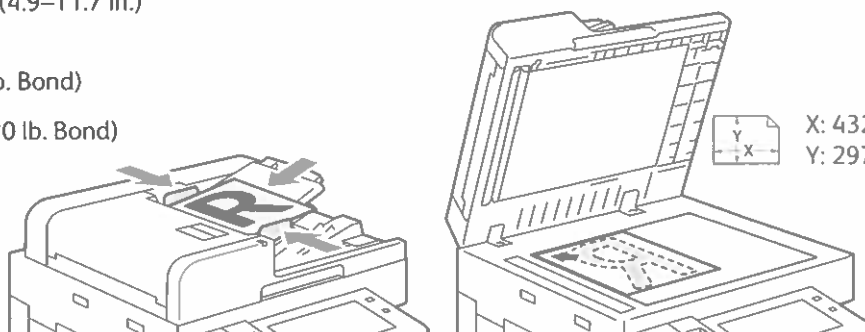


Load the original document.

2



To send the fax to a fax machine, press **Home**, then touch **Fax** or **Server Fax**.


To send the fax as an email attachment, touch **Home**, then touch **Internet Fax**.

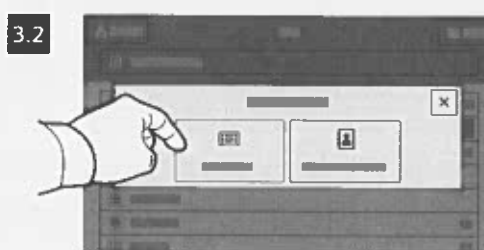

For fax numbers, touch **Manual Entry**, then enter the fax number using the touch screen alphanumeric keys and special characters. Touch **Add**. To add more fax numbers to the list, touch **Add Recipient**.

For Internet Fax email addresses, touch **Manual Entry**, then enter the email address using the touch screen keypad. Touch **Add**. To add more email addresses to the list, touch **Add Recipient**.


To select saved numbers, use the Device Address Book or Favorites. To select stored fax locations, use the Mailbox or Polling.

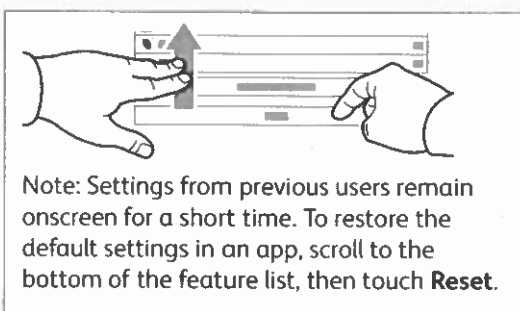

Change the settings as needed, then touch **Send**.

Printing from a USB Flash Drive

You can print .pdf, .tiff, .ps, .xps and other files types directly from a USB Flash Drive. For more information, refer to the *User Guide*.

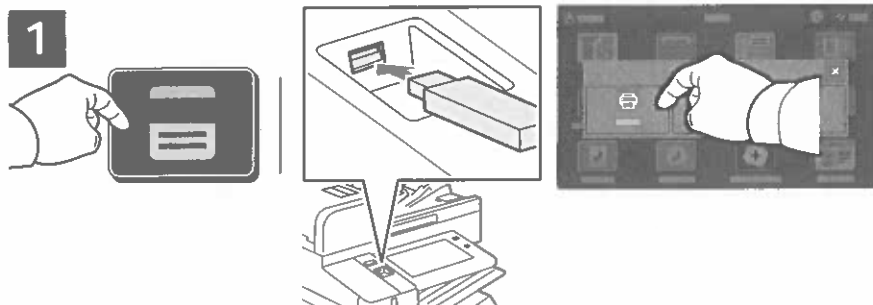

Do not remove USB Flash Drive during reading. Files may be damaged.

Touch **Print From** or insert your USB Flash Drive, then choose **Print From USB**.



Touch **Add Document**, then navigate to your files and select them.



To select the number of copies, touch the plus sign (+) or the minus sign (-). For larger numbers, touch **Quantity** then enter a number.



Select settings as needed, then touch **Print**.




Note: Settings from previous users remain onscreen for a short time. To restore the default settings in an app, scroll to the bottom of the feature list, then touch **Reset**.


Printing Jobs Stored on the Printer



You can send a print job to save to the printer, then select the job from the printer control panel to print at a later time. Jobs can be saved in the public folder or be password protected. In the Xerox® printer driver, select **Properties** (Windows) or **Xerox Features** (Mac OS), then **Job Type**. Select **Saved Job** or **Secure Print**. For Secure Print, type a passcode. Click **OK** and print the job.

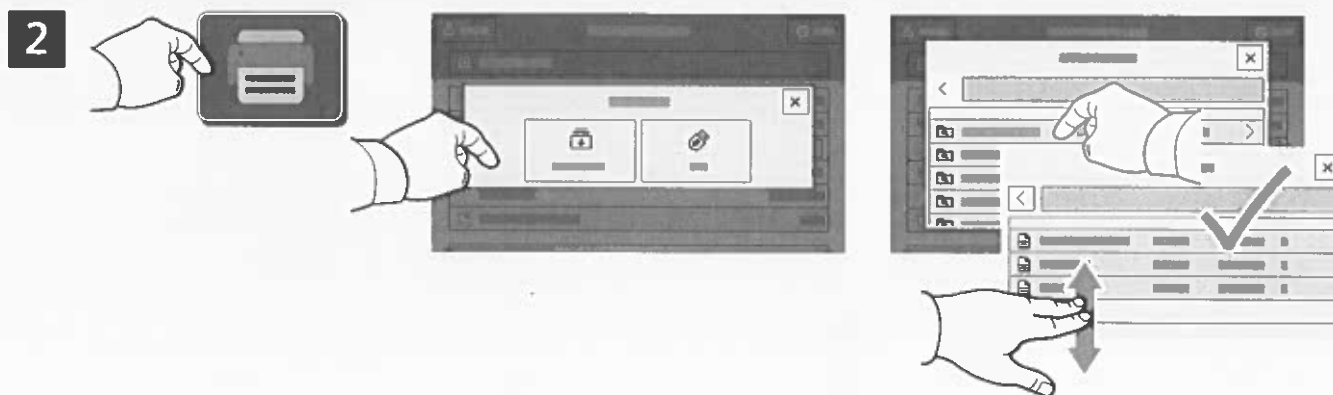

Touch **Print From** then touch **Saved Jobs**. Select the **Default Public Folder** then select your print job.

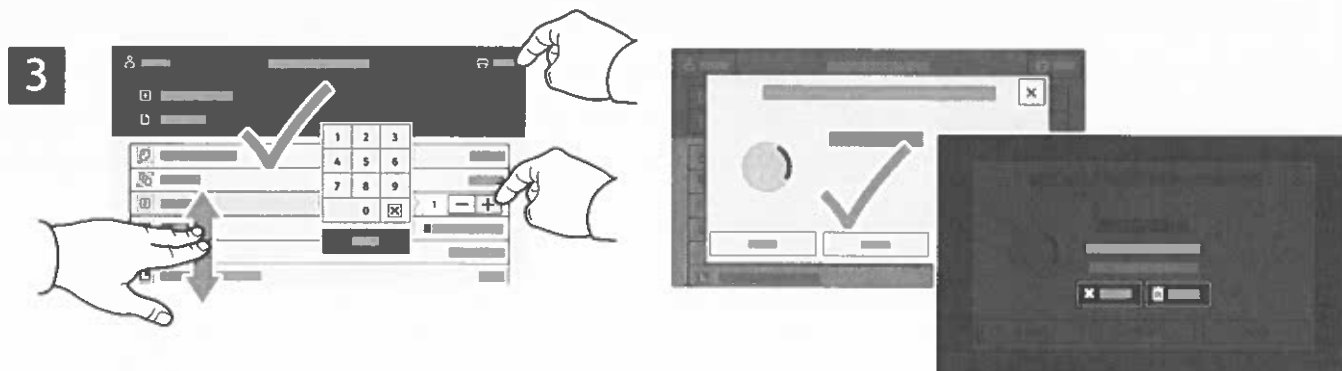

Select settings from the list. To select the number of copies, touch the plus sign (+) or the minus sign (-). For larger numbers, touch **Quantity** then enter a number. Touch **Print**. To delete the job, in the printing screen and confirmation screen, touch **Delete**.

Xerox® AltaLink® C8130/C8135/C8145/C8155/C8170
Color Multifunction Printer

Troubleshooting Print Quality

Your Xerox® AltaLink® C8130/C8135/C8145/C8155/C8170 Color Multifunction Printer is designed to produce high-quality color prints consistently. If you observe print-quality problems, use the information on these pages to troubleshoot the problems. For detailed online support information, go to www.xerox.com/office/support.

CAUTION: The Xerox® warranty, Service Agreement, or Total Satisfaction Guarantee does not cover damage caused by using unsupported paper, transparencies, or other specialty media. The Total Satisfaction Guarantee is available in the United States and Canada. Coverage can vary outside of these areas. For details, contact your local representative.

Paper Type

CAUTION: If you change the type of paper in the tray, change the paper type at the control panel to match the paper in the tray. If you fail to change the paper type, it can cause print-quality problems and damage the fuser.

For the best results, only use recommended Xerox® paper and media. Xerox® paper and media are guaranteed to produce excellent results on your Xerox® AltaLink® C8130/C8135/C8145/C8155/C8170 Color Multifunction Printer. To order Xerox® paper and media, go to www.xerox.com/office/supplies.

For a complete list of recommended paper for your printer, go to:

- North America: www.xerox.com/rmlna
- Europe: www.xerox.com/rmleu

Solving Print-Quality Problems





Use the following tables to find specific solutions to print-quality problems.

Note: The images that appear represent long-edge feed prints. If you print short-edge feed, the print-quality defects are rotated 90 degrees. The images that appear are for reference only. Not all pages represented are printed.

www.xerox.com/office/support




Solving Print-Quality Problems

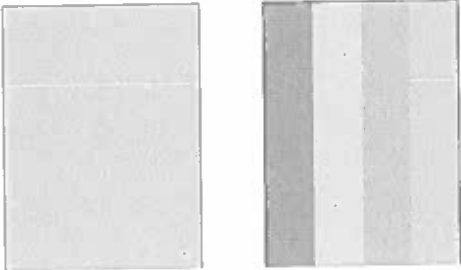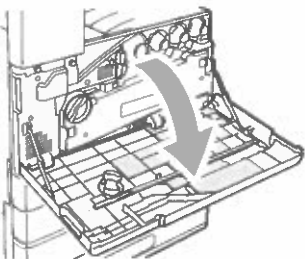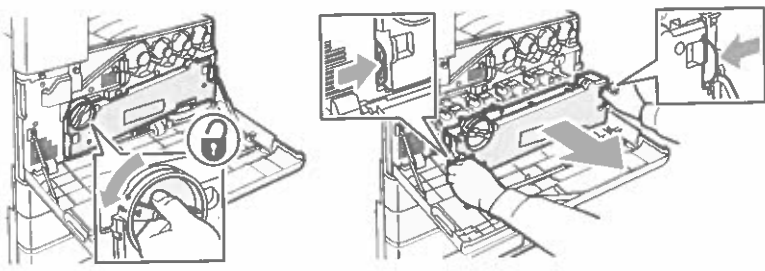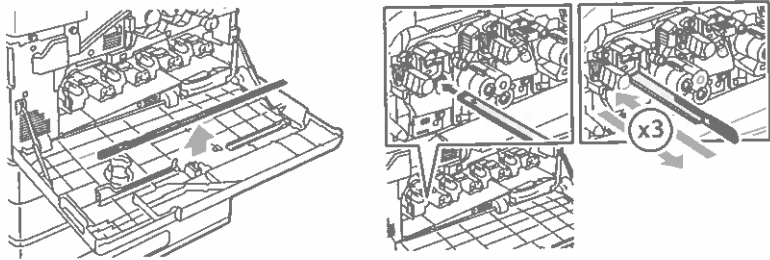Problem	Solution
<p>Light Lines or Streaks in One Color</p> 	<ol style="list-style-type: none"> 1. Open the front cover.  2. To unlock the belt tension lever, on the left side of the printer, rotate the belt tension lever, then open the drum cartridge cover.  3. Pull out the LED print head cleaner until it stops, then move it all the way in and out two or three times. Repeat this process for all four toner units. <p>Note: Ensure that you pull the LED print head cleaners out as far as they will go. Push them in as far as they will go. Do not use excessive force.</p>  <p>If the problem persists, check if the drum cartridge is causing the problem. To check, switch the suspected drum cartridge with another drum cartridge of a different color. If the problem occurs where you move the suspected drum cartridge, replace the suspected drum cartridge.</p>






Solving Print-Quality Problems (continued)

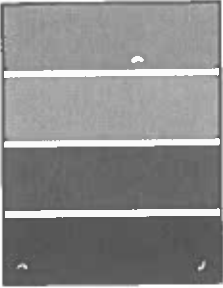Problem	Solution
<p>Incomplete Fusing</p> <p>Toner appears to be missing from the print, or rubs off easily.</p> 	<ol style="list-style-type: none"> 1. Verify that the paper you are using is the correct type for the printer and is properly loaded. For a complete list of recommended paper for your printer, go to: <ul style="list-style-type: none"> – North America: www.xerox.com/rmlna – Europe: www.xerox.com/rmleu 2. Verify that the paper type is selected on the control panel and in the print driver. 3. If the problem persists, do one of the following: <ol style="list-style-type: none"> a. For dedicated trays, log in as admin, touch Device > Tools > Device Settings > Paper Management > Tray Settings. Select the tray, touch Edit, then change the paper type. Note: To change the size, type, or color of paper in a dedicated tray when the control panel is locked, log in as the system administrator. b. For trays that are set to Fully Adjustable: <ul style="list-style-type: none"> • Trays 1–4 and 6: Open, then close the selected paper tray. • Tray 5: Remove, then reinsert the paper. The control panel prompts you to confirm or change the paper type. c. At the touch screen, touch Type, then do one of the following: <ul style="list-style-type: none"> • Select the correct paper type, then touch Confirm. • Select the next heavier type of paper, then touch Confirm. Note: Paper types from lightest to heaviest are: <ul style="list-style-type: none"> • For uncoated paper: Plain, Lightweight Cardstock, Cardstock, and Heavyweight Cardstock. • For coated paper: Lightweight Glossy Cardstock, Glossy Cardstock, and Heavyweight Glossy Cardstock.




Solving Print-Quality Problems (continued)

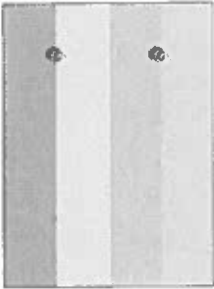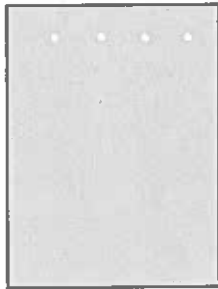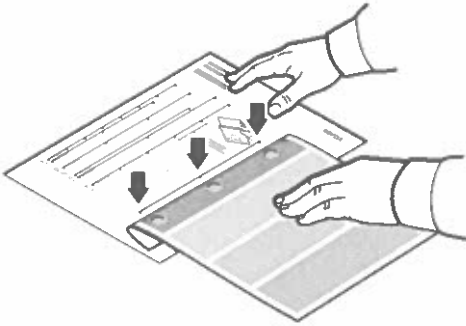Problem	Solution
<p>Repeating Defects</p> <p>Spots or lines appear at regular intervals on the page in the direction that the paper moves through the printer in all colors or in non-printed areas.</p>  <p>Spots or lines appear at regular intervals on the page, in the direction the paper moves through the printer, and in one color only.</p> 	<ol style="list-style-type: none"> At the control panel, touch Device > Tools > Troubleshooting > Support Pages > Repeating Defects Page > Print. The Repeating Defects Page prints with instructions for identifying defective units. To correct the problem, replace items identified on the Repeating Defects Page.  If you replaced the the transfer roller, reset the counter: <ol style="list-style-type: none"> At the control panel, press Log In. Enter system administrator login information, then touch Enter. For details, refer to the <i>System Administrator Guide</i>. Touch Device > Tools > Device Settings. Scroll, then touch Supplies > Supply Counter Reset. Touch Second Bias Transfer Roll. Touch Reset Counter. To close the pop-up window, touch X, touch admin, then select Logout.





Solving Print-Quality Problems (continued)

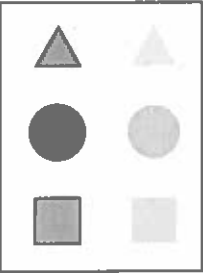Problem	Solution
<p>Offset Image</p> <p>The most common offset is toner that appears to be reprinted on the page and placed about 95 mm (3.75 in.) across the page in the direction that the paper moves through the printer.</p> <p>Note: For a different distance, use the Repeating Defects Page to identify the cause.</p> 	<ol style="list-style-type: none"> 1. Verify that the paper you are using is the correct paper type for the printer and is properly loaded. For a complete list of recommended paper for your printer, go to: <ul style="list-style-type: none"> – North America: www.xerox.com/rmlna – Europe: www.xerox.com/rmleu 2. Verify that the paper type is selected on the control panel and in the print driver. Note: To change the size, type, or color of paper in a dedicated tray when the control panel is locked, log in as the system administrator. 3. If the problem continues, do one of the following: <ol style="list-style-type: none"> a. For dedicated trays, log in as admin, touch Device > Tools > Device Settings > Paper Management > Tray Settings. Select the tray, touch Edit, then change the paper type. b. For trays that are set to Fully Adjustable: <ul style="list-style-type: none"> • Trays 1–4 and 6: Open, then close the selected paper tray. • Tray 5: Remove, then reinsert the paper. <p>The control panel prompts you to confirm or change the paper type.</p> c. At the touch screen, touch Type, then do one of the following: <ul style="list-style-type: none"> • Select the correct paper type, then touch Confirm. • Select the next heavier paper type, then touch Confirm. <p>Note: Paper types from lightest to heaviest are:</p> <ul style="list-style-type: none"> • For uncoated paper: Plain, Lightweight Cardstock, Cardstock, and Heavyweight Cardstock. • For coated paper: Lightweight Glossy Cardstock, Glossy Cardstock, and Heavyweight Glossy Cardstock. d. To identify the cause, use the Repeating Defects Page. For details, refer to the previous page.




Solving Print-Quality Problems (continued)

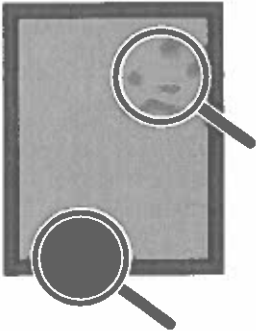Problem	Solution
<p>Heavy Coverage Appears Mottled or Blotchy</p> <p>Blacks Appear Blue</p> 	<ol style="list-style-type: none"> 1. Verify that the paper you are using is the correct type for the printer and is properly loaded. For a complete list of recommended paper for your printer, go to: <ul style="list-style-type: none"> – North America: www.xerox.com/rmlna – Europe: www.xerox.com/rmleu 2. Verify that the paper type is selected on the control panel and in the print driver. <p>If the problem continues, call for service.</p>
<p>Colors Align Incorrectly</p> <p>Color has shifted outside the designated area or is superimposed over another color.</p> 	<p>Open, then close the front door. The printer performs an automatic registration calibration with the next print.</p>
<p>All Colors Too Light or Too Dark</p> <p>Colors appear faded or too dark on print or copy.</p>	<ol style="list-style-type: none"> 1. Verify that the paper you are using is the correct type for the printer and is properly loaded. For a complete list of recommended paper for your printer, go to: <ul style="list-style-type: none"> – North America: www.xerox.com/rmlna – Europe: www.xerox.com/rmleu 2. Verify that the paper type is selected on the control panel and in the print driver. 3. Calibrate the printer colors. The calibration procedure adjusts the printer color balance and lightness level. At the control panel, touch Device > Tools > Troubleshooting > Calibration > Print Calibration or Copy Calibration. Follow the onscreen instructions to run the calibration procedure. <p>Note: For information about changing the Lightness setting in the PostScript print driver for your operating system, refer to the <i>Printing</i> chapter of the <i>User Guide</i>.</p>



Solving Print-Quality Problems (continued)

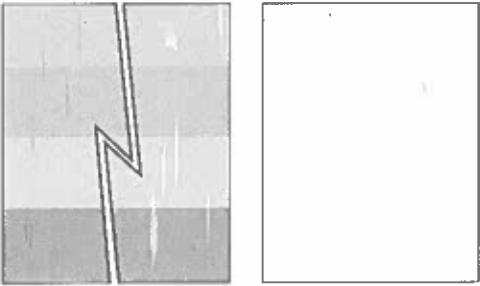Problem	Solution
<p>Lines, Smudges, or Streaks</p> <p>Dark or light marks appear on the page in all colors and/or in non-printed areas.</p> 	<ol style="list-style-type: none"> 1. Verify that the paper you are using is the correct type for the printer and is properly loaded. For a complete list of recommended paper for your printer, go to: <ul style="list-style-type: none"> – North America: www.xerox.com/rmlna – Europe: www.xerox.com/rmleu 2. Verify that the paper type is selected on the control panel and in the print driver. 3. If the problem persists, follow these steps: <ol style="list-style-type: none"> a. At the control panel, touch Device > Information Pages > Troubleshooting Print Quality Page > Print. The Repeating Defects Page prints with instructions for identifying defective units. b. To correct the problem, replace the items identified on the Repeating Defects Page. 4. If the problem continues, replace the transfer belt cleaner. If you replace the transfer belt cleaner, reset the counter: <ol style="list-style-type: none"> a. At the control panel, press Log In. Enter system administrator login information, then touch Done. For details, refer to the <i>System Administrator Guide</i>. b. Touch Device > Tools > Device Settings. c. Scroll, then touch Supplies > Supply Counter Reset. d. Touch Transfer Belt Cleaner. e. Touch Confirm Reset. f. To close the pop-up window, touch X, touch admin, then select Logout.

Copyright © 1988 by American Medical Association
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without permission in writing from the American Medical Association, 535 North Dearborn Street, Chicago, Ill. 60610.

Printed at the American Medical Association, 535 North Dearborn Street, Chicago, Ill. 60610
Printed on acid-free paper
Second-class postage paid at Chicago, Ill., and at additional mailing offices
Postmaster: Send address changes in this journal to JAMA, 535 North Dearborn Street, Chicago, Ill. 60610

Subscription service available through the American Medical Association
Subscription price, \$12.00 per annum in advance. Single copies, 35 cents
Entered as second-class matter, October 3, 1902, under post office number 384, at Chicago, Ill., under special agreement of post office and postmaster at special rate of postage provided for in Section 1103, Act of October 3, 1917. Accepted for mailing at special rate of postage provided for in Section 1103, Act of October 3, 1917, on July 1, 1968. Postmaster: Send address changes in this journal to JAMA, 535 North Dearborn Street, Chicago, Ill. 60610.

Subscription service available through the American Medical Association
Subscription price, \$12.00 per annum in advance. Single copies, 35 cents
Entered as second-class matter, October 3, 1902, under post office number 384, at Chicago, Ill., under special agreement of post office and postmaster at special rate of postage provided for in Section 1103, Act of October 3, 1917. Accepted for mailing at special rate of postage provided for in Section 1103, Act of October 3, 1917, on July 1, 1968. Postmaster: Send address changes in this journal to JAMA, 535 North Dearborn Street, Chicago, Ill. 60610.

Solving Print-Quality Problems (continued)

Problem	Solution
Poor Transparency Print Quality Print-quality defects are occurring on transparency film: <ul style="list-style-type: none"> • Light or dark spots • Smeared toner • Light bands on print 	Use only Xerox® Transparencies. CAUTION: Using non-Xerox® transparencies can cause print-quality problems or damage to the fuser. Damage caused by using unsupported media is not covered by the Xerox® Warranty, Service Agreement, or Total Satisfaction Guarantee.
Grays are Not Neutral The grays on the printed page are not neutral; they contain color tints.	Calibrate the printer colors. The calibration process adjusts the printer color balance. <ol style="list-style-type: none"> 1. At the control panel, touch Device > Tools > Troubleshooting > Calibration > Print Calibration. 2. Follow the onscreen instructions to run the Print Calibration procedure.
Colors Vary Between Computers The colors printed from one computer do not match the colors printed from a different computer.	<ol style="list-style-type: none"> 1. Confirm that the print driver settings for Print Quality, Color Correction, and Color By Words are identical on both computers. 2. Adjust the settings as needed. <p>Note: Print driver settings override the settings that are made at the printer control panel.</p>
Colors Do Not Match The color produced by the printer is different from the color that it must match.	For more information about color matching, go to the Online Support Assistant at www.xerox.com/office/support .
Printed Colors Do Not Match Monitor Colors The color produced by the printer looks different from the color that appears on the computer monitor.	To view information about color matching between the monitor and the printed document, go to the Online Support Assistant at www.xerox.com/office/support .

the first part of the paper, we discuss the importance of the research and the need for a new approach to the study of the relationship between the firm and the environment.

In the second part, we present a new framework for the study of the relationship between the firm and the environment, which is based on the concept of the firm as a social institution.

In the third part, we discuss the implications of the new framework for the study of the relationship between the firm and the environment, and we conclude with some suggestions for future research.

The paper is organized as follows. In the first part, we discuss the importance of the research and the need for a new approach to the study of the relationship between the firm and the environment.

In the second part, we present a new framework for the study of the relationship between the firm and the environment, which is based on the concept of the firm as a social institution.

In the third part, we discuss the implications of the new framework for the study of the relationship between the firm and the environment, and we conclude with some suggestions for future research.

The paper is organized as follows. In the first part, we discuss the importance of the research and the need for a new approach to the study of the relationship between the firm and the environment.

In the second part, we present a new framework for the study of the relationship between the firm and the environment, which is based on the concept of the firm as a social institution.

In the third part, we discuss the implications of the new framework for the study of the relationship between the firm and the environment, and we conclude with some suggestions for future research.

The paper is organized as follows. In the first part, we discuss the importance of the research and the need for a new approach to the study of the relationship between the firm and the environment.

In the second part, we present a new framework for the study of the relationship between the firm and the environment, which is based on the concept of the firm as a social institution.

In the third part, we discuss the implications of the new framework for the study of the relationship between the firm and the environment, and we conclude with some suggestions for future research.

The paper is organized as follows. In the first part, we discuss the importance of the research and the need for a new approach to the study of the relationship between the firm and the environment.

In the second part, we present a new framework for the study of the relationship between the firm and the environment, which is based on the concept of the firm as a social institution.

In the third part, we discuss the implications of the new framework for the study of the relationship between the firm and the environment, and we conclude with some suggestions for future research.

The paper is organized as follows. In the first part, we discuss the importance of the research and the need for a new approach to the study of the relationship between the firm and the environment.

In the second part, we present a new framework for the study of the relationship between the firm and the environment, which is based on the concept of the firm as a social institution.

In the third part, we discuss the implications of the new framework for the study of the relationship between the firm and the environment, and we conclude with some suggestions for future research.

Print-Quality Settings

The Print-Quality mode and Color Corrections options directly control the quality of your prints. You can change these settings in the print driver. Select the setting that is best suited for your print job.

Print-Quality Mode

- **Enhanced** mode is the general-purpose mode for crisp, bright color prints. Enhanced mode balances speed with quality.
- **High Resolution** mode is a high-quality mode that creates fine lines and detail. High Resolution mode is recommended for vibrant, saturated color prints. High Resolution mode balances quality over speed.
- **Toner Saver** mode reduces the amount of toner used for print jobs and is useful for draft-quality output. Print quality is slightly lower than using Standard mode.

Color Corrections

Color corrections are available on the Image Options tab in the print driver. The Preview window appears on the right side of the Image Options tab. When the Preview check box is selected, color correction appears in the Preview window. Selecting and clearing the Preview check box allows you to compare the corrected image to the uncorrected image.

To adjust the color characteristics of your print job, select the Color Correction tab, then select options as needed.

- **Xerox Black and White Conversion** converts the colors to grayscale, producing a black and white print job. This setting is useful for creating black and white master documents for photocopying or faxing.
- **Color Correction** provides options to match the printer colors as closely as possible to colors on other devices, such as your computer screen or a printing press.
 - **Automatic** applies the best color correction to each graphic element of the document: text, artwork, and photographs.
 - **Simulate LCD Display** approximates the print job color to the colors on a LCD computer monitor.
 - **sRGB Display** approximates the print job color to an RGB (red, green, blue) display.
 - **None** removes all color correction. This option is the best choice when working with color specified within your application or operating system.
- **Xerox Automatic Color** applies the best color correction to each graphic element of the document, including text, artwork, and photographs.
- **Custom Automatic Color** provides more options for customizing colors in your print job. Use one selection to adjust the color of the text and graphics. Use the other selection to adjust the color correction applied to images. You can apply a wide range of color options to each element to simulate the outputs of different color devices.

To adjust colors using descriptive phrases, select the **Color By Words** tab. From the menus, select the phrases to build a sentence that describes the color adjustment that you want. You can build more than one sentence for the print job, affecting one color or an entire range of colors.

To change settings for each individual color parameter, select the **Color Adjustments** tab, then adjust the sliders. The sliders allow you to select a continuous range of adjustment for each of the following:

- Lightness
- Contrast
- Saturation
- Cyan to Red
- Magenta to Green
- Yellow to Blue

For more information on color matching and ICC profiles, go to www.xerox.com/office/support.

Supplies Usage

Supplies ordering information is located at www.xerox.com/officesupplies

Consumables

1 Toner Cartridges



Black

Date Installed: Sep 19, 2024
Reorder: 006R01742
Estimated Pages Remaining: 13500
(Based upon this toner cartridge's average coverage: 3 %)

Life Remaining

Cyan

Date Installed: Mar 27, 2025
Reorder: 006R01743
Estimated Pages Remaining: 9000
(Based upon this toner cartridge's average coverage: 5 %)

Life Remaining

Magenta


Date Installed: Jun 19, 2025
Reorder: 006R01744
Estimated Pages Remaining: 17000
(Based upon this toner cartridge's average coverage: 7 %)

Life Remaining

Yellow

Date Installed: Jun 19, 2025
Reorder: 006R01745
Estimated Pages Remaining: 3500
(Based upon this toner cartridge's average coverage: 7 %)

Life Remaining

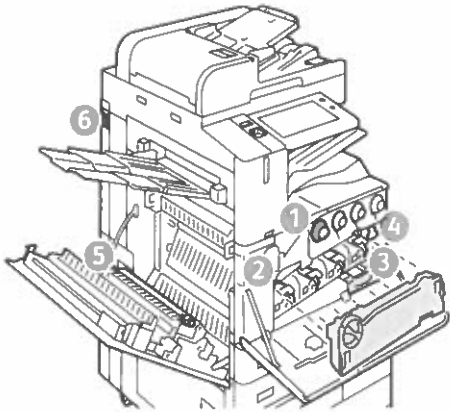

Routine Maintenance Items

2 Drum Cartridge



Black (R1)

Date Installed: Aug 28, 2024
Reorder: 013R00681
Estimated Pages Remaining: 142500
(Based on average printer job size: 1 Pages)

Life Remaining

Cyan (R2)

Date Installed: Aug 28, 2024
Reorder: 013R00681
Estimated Pages Remaining: 148500
(Based on average printer job size: 1 Pages)

Life Remaining

Magenta (R3)

Date Installed: Aug 28, 2024
Reorder: 013R00681
Estimated Pages Remaining: 148500
(Based on average printer job size: 1 Pages)

Life Remaining

Yellow (R4)

Date Installed: Aug 28, 2024
Reorder: 013R00681
Estimated Pages Remaining: 148500
(Based on average printer job size: 1 Pages)

Life Remaining

3 Waste Container



 
Date Installed: Jan 20, 2025
Reorder: 008R08101

Almost Full

4 Transfer Belt Cleaner



Date Installed: Jan 20, 2025
Reorder: 001R00623
Estimated Pages Remaining: 130000



5 Second Bias Transfer Roller



Date Installed: Jan 20, 2025
Reorder: 008R08103
Estimated Pages Remaining: 80500

