
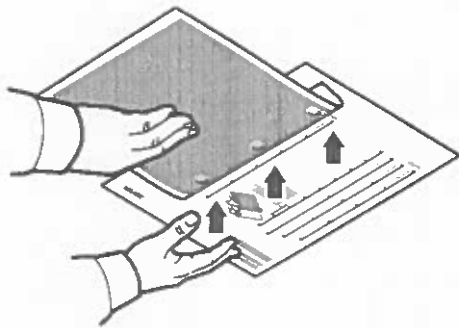



Repeating Defects

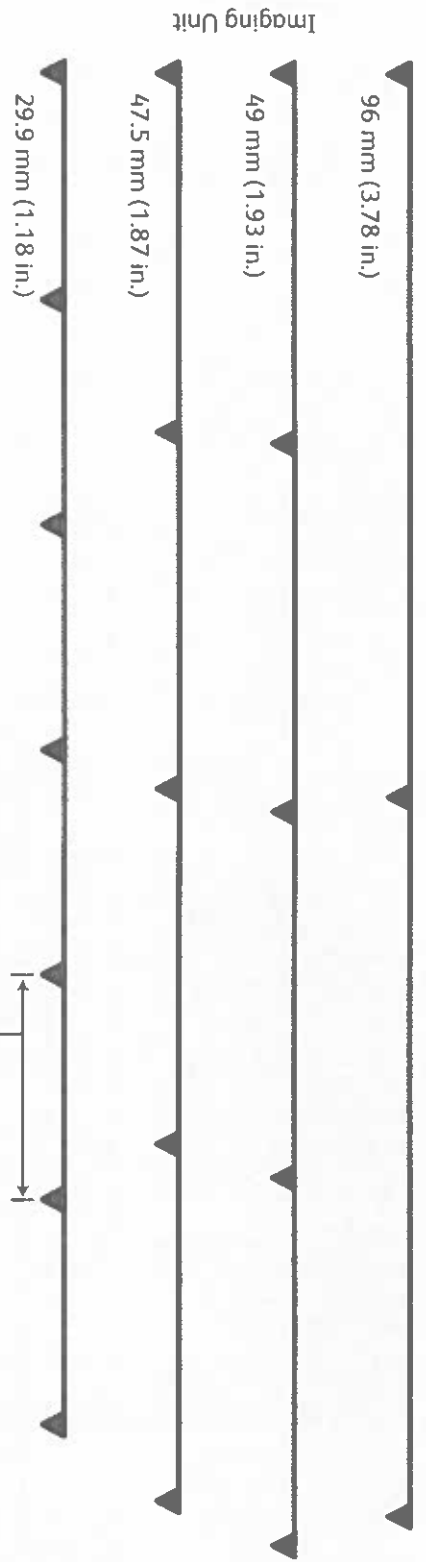


To identify the component causing the defect, compare your print sample against the measurements shown.

To diagnose a defect on the transfer belt, print eight Letter/A4-size pages. Verify that the same defect appears on every fourth page.



Call for service for this defect.

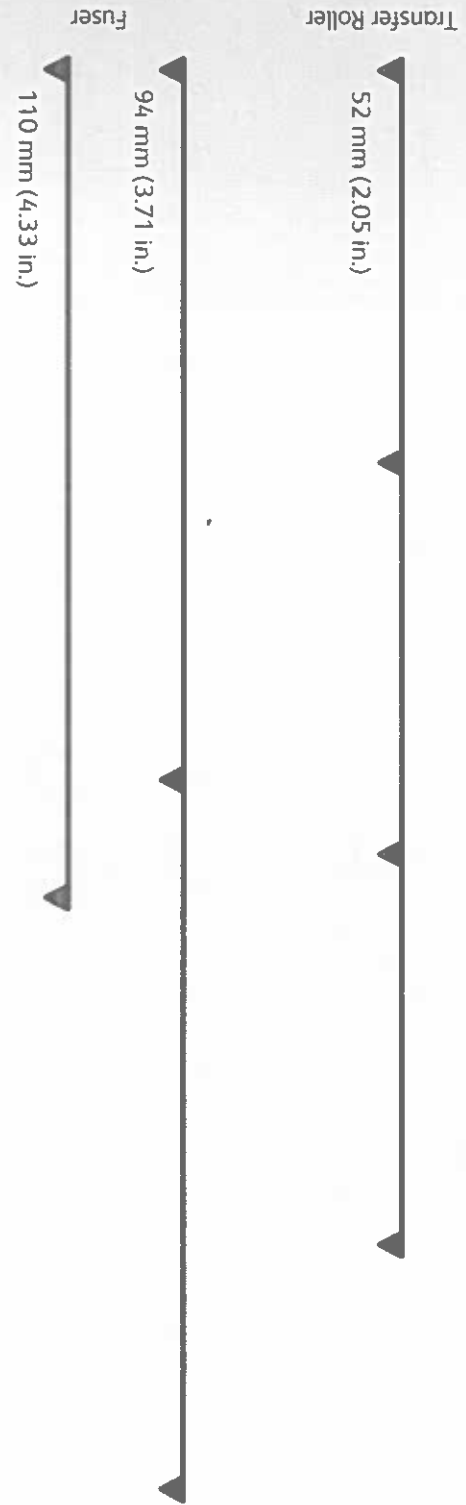

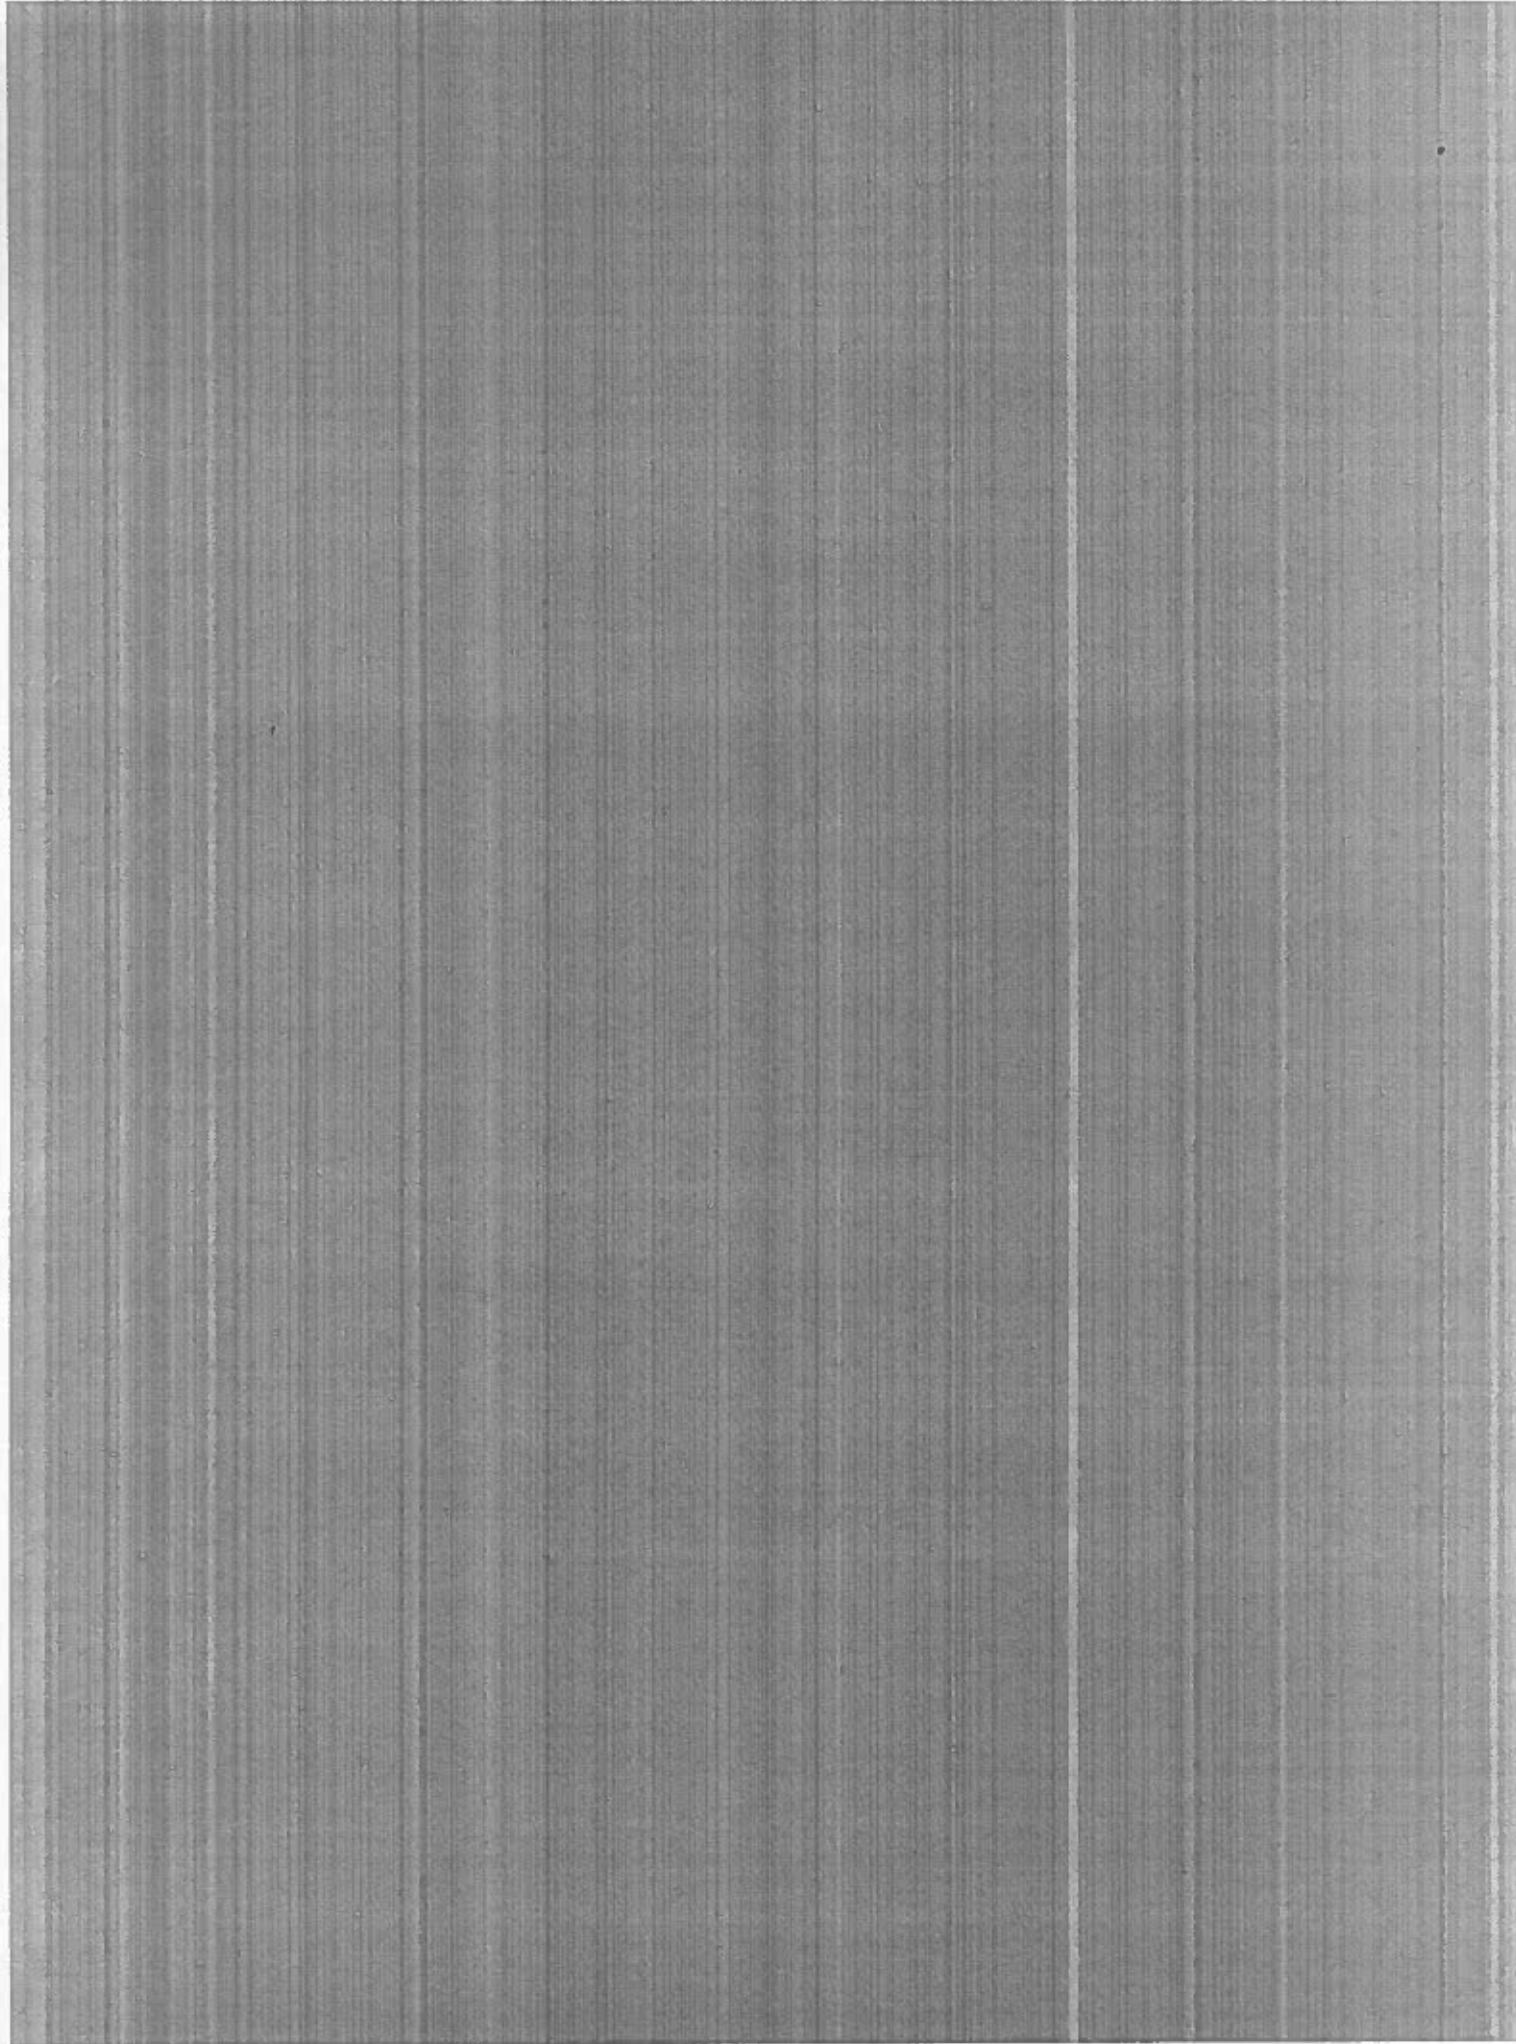

Repeating Defects

Xerox® VersaLink® B625 Multifunction Printer

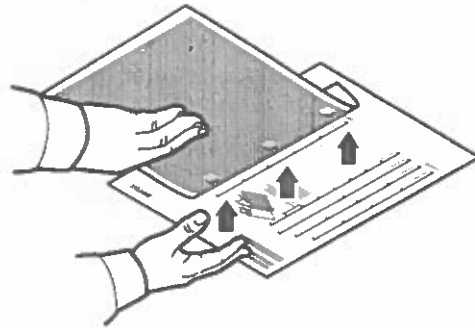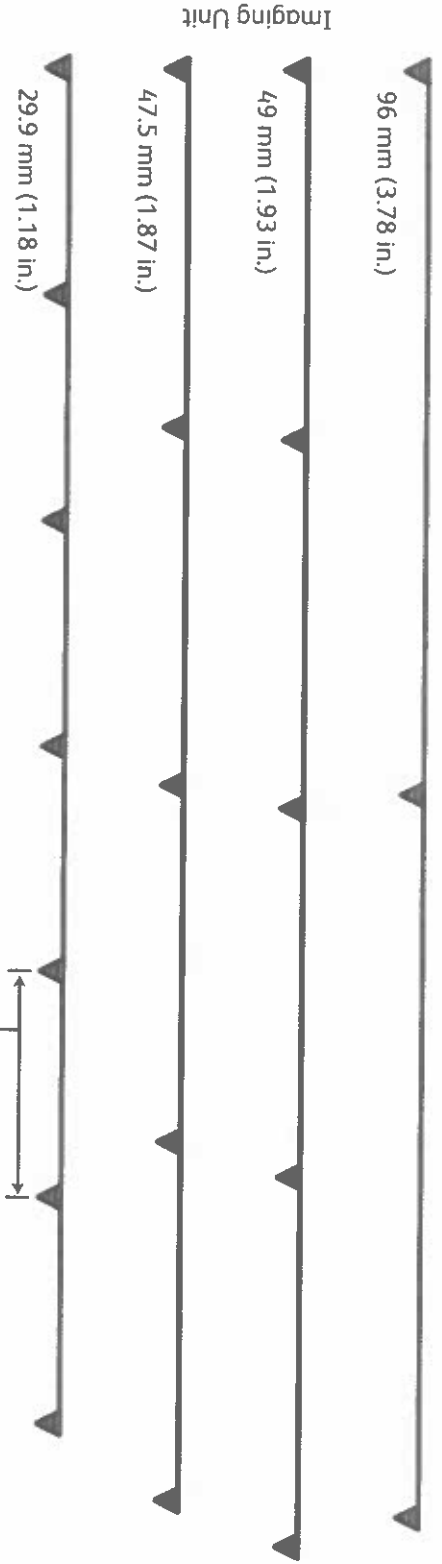

To identify the component causing the defect, compare your print sample against the measurements shown.

To diagnose a defect on the transfer belt, print eight Letter/A4-size pages. Verify that the same defect appears on every fourth page.

Call for service for this defect.

